


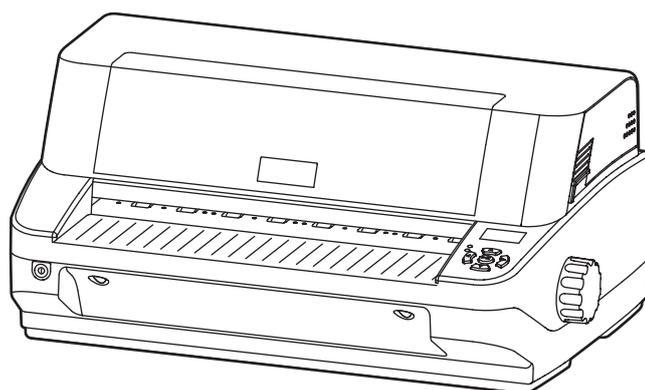

User's Manual

BP-1000K (Model B)



Declare

About Trademark

Corporation names and product names are the registered trademarks or commodity names of the corporation.

- * EPSON is a registered trademark of Seiko Epson Corporation.
- * ESC/PK2 is a registered trademark of Seiko Epson Corporation.
- * OKI is a registered trademark of Oki Data Corporation.
- * OKI 5530SC is a registered trademark of Oki Data Corporation.
- * IBM is a registered trademark of International Business Machines Corporation.
- * IBM 2391 is a registered trademark of International Business Machines Corporation.
- * Windows is a registered trademark of Microsoft Corporation.
- * OLIVETTI is a registered trademark of Olivetti Corporation.
- * OLIVETTI PR2 is a registered trademark of Olivetti Corporation.

Important Safety Instructions

Read all of these instructions carefully and thoroughly and save them for later reference. The unauthorized operation would lead to malfunction or accident. Manufacturers have no responsibilities for the problems which are led by misoperations.

1. Follow all warnings and instructions in the manual as well as marked on the product.
2. Do not touch the print head if the printer has just been recently used as the print head may be hot.
3. Do not put your fingers under the left and right tractor sprocket covers of the tractor (optional) when installing the tractor paper.
4. Unplug this product from the power outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
5. Do not use this product near water.
6. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to you or the product.
7. Slots and openings on the cabinet and the back or bottom are provided for air ventilation. To ensure reliable operation of the product and to protect it from overheating, do not block or cover these openings. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heater. This product should not be placed in a built-in installation or kiosk stand unless proper ventilation is provided.
8. This product should never be placed near or over a radiator or heat origin, and should avoid of direct sunshine.
9. Do not locate this product where the cord would be walked on. When the cord or the plug is mangled, please stop using and get a new one replaced. Make sure the old one is far away from the printer, so it can avoid someone who does not know the inside story getting damage.
10. Do not use in locations subject to high humidity or dust levels. Excessive humidity and dust may cause equipment damage or fire.
11. Never push objects of any kind into this product though cabinet slots as they may touch dangerous voltage dots or short out parts.
12. Don't remove the printer's out-cover and repair the printer. When needed, call or take it to the professional.
13. To ensure safety, please unplug this product prior to leaving it unused for an extended period. The wall outlet you plan to connect to should be nearby and unobstructed.
14. Unplug this product from the power outlet and leave servicing to qualified service personnel under the following conditions:
 - A. When the power cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally when the operating instructions are followed.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance, it indicates a need for service.

Note: The contents of this manual are subject to change without notice.

*** All parts of the printer can be recycled. When it is abandoned, we can call it back freely. Please contact us when you abandon it.**

Table of Contents

Declare	i
Important Safety Instructions	ii
Chapter 1 Product Features	1
Chapter 2 Checking and Installing	3
2.1 Unpacking and Checking	3
2.2 Unpacking the Protective Materials	3
2.3 Main Parts of the Printer.....	4
2.4 Installing the Printer	4
2.4.1 Choose Proper Installing Place	4
2.4.2 Installing the Paper Feed Knob	4
2.4.3 Installing the Ribbon Cartridge	5
2.5 Connecting to Your Computer	7
2.5.1 Connecting the Parallel Interface.....	7
2.5.2 Connecting the USB Interface	8
2.5.3 Connecting the Serial Interface Cable	8
2.5.4 Connecting the Ethernet Interface Cable.....	9
2.6 Connect the Power Core	9
2.7 Installing the Driver	9
2.8 Network Settings	12
2.8.1 Connecting Printer.....	12
2.8.2 Setting IP Address	12
2.8.3 Installing Printer Network Driver	14
Chapter 3 Paper Process	22
3.1 Paper Switch	22
3.2 Loading the Cut Sheet	22
3.3 Loading the Passbook.....	23
3.4 Loading the Vertical Certificate.....	23
3.5 Loading the Thick Paper	24
3.6 Installing Tractor Paper	24
3.7 Tearing the Tractor Paper.....	25
Chapter 4 Control Panel	27
4.1 Key, Indicator Light and LCD Display on Control Panel	27
4.2 Basic Operation of Control Panel	27
4.3 The information on the LCD Display When at Stand by State	28
4.4 Use of the Menu Setup System.....	29
4.4.1 Change the Current Setting of the Printer.....	29
4.4.2 Printing the Current Setting Report.....	30
4.4.3 Menu Item Description.....	32
4.4.4 Online Aptitude Parameter Setting	33
4.4.5 Restoring Factory Printer Settings.....	34
4.4.6 Head Pin Test	34
4.5 TOF Adjustment	35
4.6 Tear Off Position Adjustment	35

4.7 The Self Test Functions	35
4.7.1 ASCII Self-Test	35
4.7.2 Chinese Self Test Mode.....	35
4.7.3 H Pattern Test.....	36
4.7.4 Hex Mode	36
4.7.5 Dot Alignment Mode	36
Chapter 5 Maintenance and Troubleshooting	38
5.1 Cleaning the Printer	38
5.2 Problems and Solutions	38
5.3 Error Indication on the Display of Control Panel.....	40
Chapter 6 Paper Specification	42
6.1 Cut Sheet Printable Area.....	42
6.2 Tractor Paper Printable Area	43
6.3 Passbook Printable Area	44
6.3.1 Size Specifications of Horizontal Passbook.....	44
6.3.2 Size Specifications of Vertical Certificate.....	45
Appendix A Technical Specification.....	46
A.1 Technical Specification.....	46
A.2 Parallel Interface.....	48
A.3 USB Interface	49
A.4 Serial Interface.....	49
A.5 Ethernet Interface	51
A.6 Cautions of Printing	51

Chapter 1 Product Features

Thank you for choosing Jolimark passbook printer. The printer is a product of 24 pin high quality 110 column multifunction passbook/certificate/report printer, it can fulfill your printing requirement.

The printer has the specialties as follows:

- **Auto fit paper thickness function**

Use floating flat platen, have the function of Auto fit paper thickness which makes the printing quality better. Its maximum thickness can reach 3mm.

- **Have the function of auto Load/Eject and auto skew adjustment**

Cut sheet can feeding the paper in the front of the printer and auto load to the printing position. Also it has the function of Auto Skew Adjustment. If the paper is in less than 30 ° skews, it will auto adjust. The tractor paper is installed on the tractor (optional). You can control it by pressing button **Load/Eject** or **LF/FF**, so that the paper can auto feeding to the printing position. After printing, the paper would eject from the front of printer which make it easy to tear.

- **Auto detecting paper margin function**

It can base on the position of the paper to adjust the printing position, which avoids it printing out of the paper.

- **Any position to feed paper and printing function**

Adopt professional design of auto fit paper insert. The printer can fulfill any position to feed paper and printing function in the printable area.

- **One button to control the switch in paper modes**

You only need to press "the paper switchover" button which make it switch in 4 paper modes. It is more intelligence, convenience and simple.

- **Paper tear function**

This function can make the tractor paper auto feed to the paper tear position, so that it can tear paper accurately after printing.

- **Function of paper eject**

With this function the user can easy operate it by the control panel to eject the cut sheet and tractor paper from the printer.

- **Flat push paper feed mechanism which solve the problem of paper jam**

Innovative flat push paper feed mechanism which can make paper not skew and deforming, so that when it printing some special files (such as passbook, certificate, 1+n invoice, envelope, post card and labels) will not jam paper.

- **Control panel with high definition LCD display**

You can know the current printing state of the printer through the LCD display, and you can also finish all the function setting through the LCD display.

- **Holistic engineering design by the printer combine the user**

With the design of making the power switch, the operation button and the LCD display in the front of the printer. The knob is designed to at the right side of the printer, which make sure the user feel much comfortable and convenience.

- **Safety design of humanization**

The printer installing a sensor of cover open which make the printer stop printing whenever the upper cover does not be covered and make the print head move to the middle position. If you close the cover it will continue printing again.

- **Function of auto select the data transmission interface**

The printer fittings the parallel interface, USB interface, serial interface and Ethernet interface. (According to specific interface standard) So it can receive the date of parallel interface (Centronics) and USB interface. Once the computer send out the date, the printer can detecting the type of the data and auto switch to the right interface to receive it.

- **High speed and super high speed printing with high quality**

The printer can be print the high quality by 10 CPI at normal mode with the speed of 100CPS. At high speed mode, the printer can be printing with the gap of 10 CPI at the speed of 300CPS. At super high speed mode, the printer can be printing with the gap of 10CPI at the speed of 360CPS.

- **High resolution of image printing**

Max resolution of 360DPI (horizon) × 360DPI (perpendicularity) and the image is most definitely.

- **Compatibility**

The command compatible the OKI 5530SC, Epson ESC/PK2, Olivetti PR2 and IBM which are popular control command in the printer market.

- **Letter quality font**

There are Roman, Sans Serif, Courier, Prestige, Script, OCR-A&B etc. characters which can compare with other band of printer.

- **Bar code memorizer**

There are standard bar code types show as follow: EAN-13, EAN-8, Interleaved 2 of 5, Matrix 2 of 5, Industrial 2 of 5, Code 39, Code 128 B, Code 128 C, NW-7.

- **Electronic menu**

The printer can setting the parameter by itself and saving into the memorizer of the printer.

- **Enhance Chinese character set**

This printer contains GB18030 Chinese character set and also supports 4 bytes Chinese printing.

- **Contain Bank system used character set**

It supports bank system used character set print out.

- **Contain any position paper feed function**

It supports to feed paper in any position on the paper path.

- **Contain break pin compensation function**

User can set the printer to print using the pin which is in good condition to compensate the break pin.


- **Pin switch printing mode**

User can set pins to switch while printing form transverse line in order to improve print head life.


Chapter 2 Checking and Installing

2.1 Unpacking and Checking

Check the following items in the package, if any of these items is missing, please contact your dealer. (1) Printer; (2) Ribbon cartridge (JMR115); (3) Paper feed knob; (4) Driver CD; (5) Power cord; (6) Facility user's guide (as Figure 2-1 show).

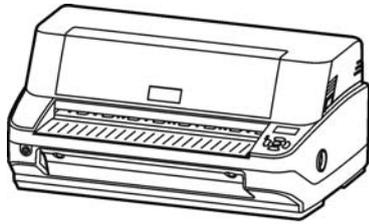


Printer

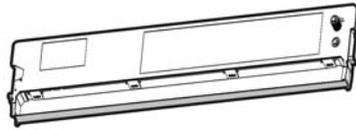

Ribbon cartridge (JMR115)



Paper feed knob

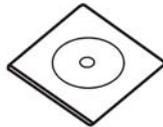


Driver CD

(Including *User's Manual* and Driver)



Power cord

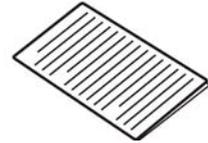

Facility user's guide

Figure 2-1 Items in the packing list

2.2 Unpacking the Protective Materials

1. Open the packing box, lift up the printer, open the upper cover of the printer, remove the protective materials of the upper printer frame.
2. Save all the original packing materials, so that it can use when transporting the printer (show as figure 2-2).

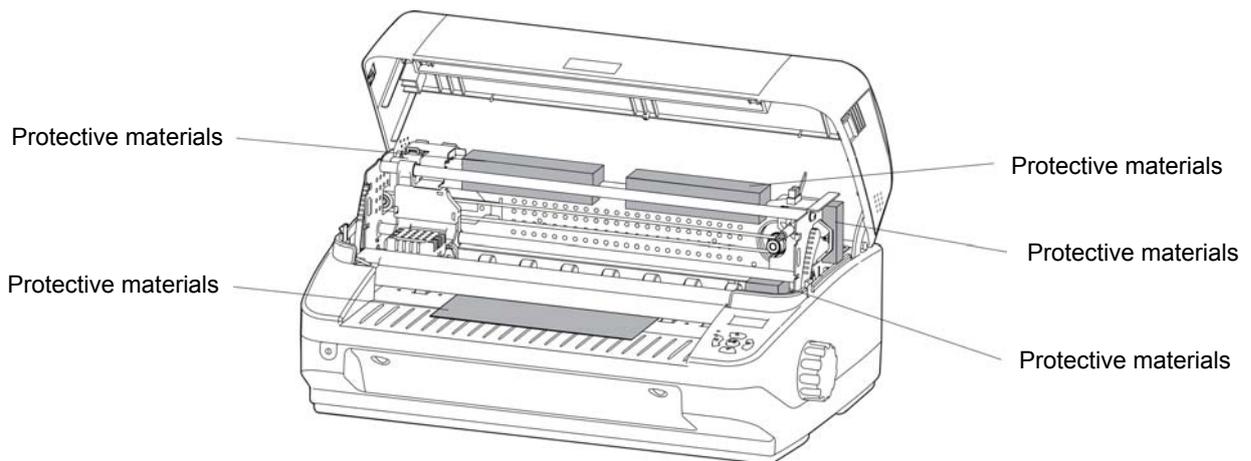


Figure 2-2 Unpacking protective materials

2.3 Main Parts of the Printer

Figure 2-3 and Figure 2-4 mark the names of main parts.

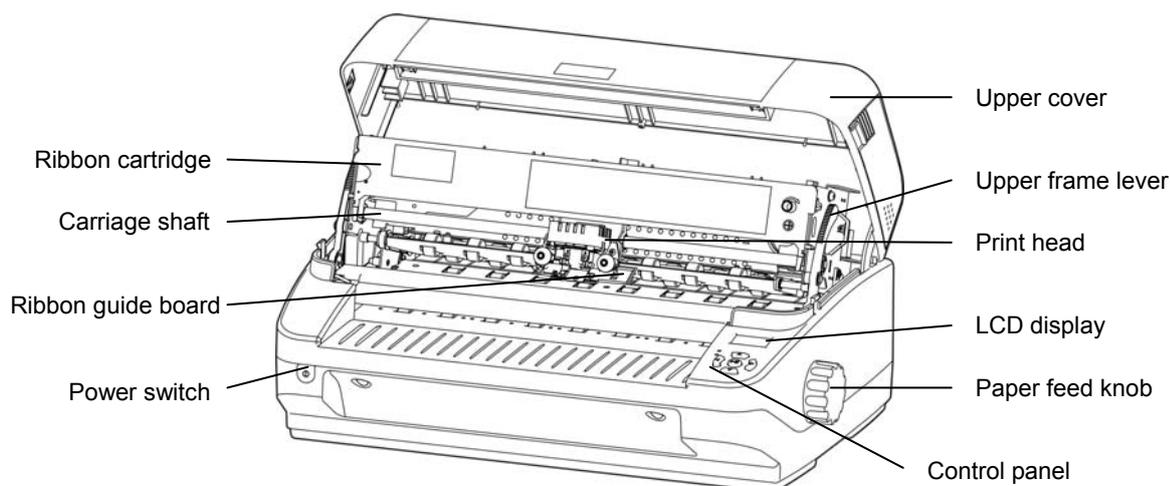


Figure 2-3 Main parts of the printer (Front view)

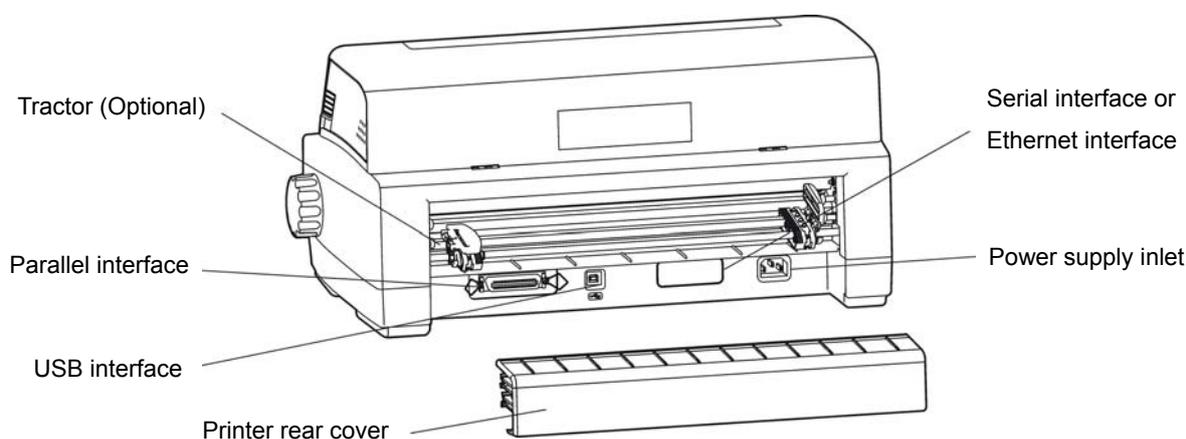


Figure 2-4 Main parts of the printer (back view)

Note: According to specific interface standards

2.4 Installing the Printer

2.4.1 Choose Proper Installing Place

When choosing the installing place please consider following problems:

1. The laying place must be plane and fixing.
2. When printing tractor papers, the paper must be fed through the rear of the printer. So you should leave enough space for safety printing. If you put the tractor paper on the floor, the horizon minimum range between the printer and the paper should over 30mm. The printer should be place where backside of the printer is away the wall over 60cm, which avoid the paper break off from the tractor (optional).
3. Easy for operation, the table board should not be too high, it can be suitable about 60cm.

2.4.2 Installing the Paper Feed Knob

1. Insert the paper feed knob into the fixing hold on the right on the printer (Show as figure 2-5).

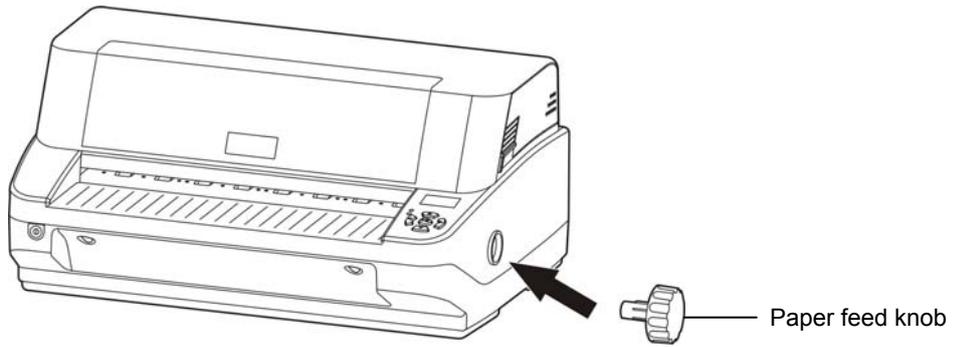


Figure 2-5 Installing the Paper feed knob

Note: The D shape placket of the knob should match the D shape shaft inside the printer cover.

2. Press the paper feed knob till it very close up the cover of the printer.

2.4.3 Installing the Ribbon Cartridge

1. Switch on the Power and open the upper cover of the printer. The print head will move to the middle position automatically.

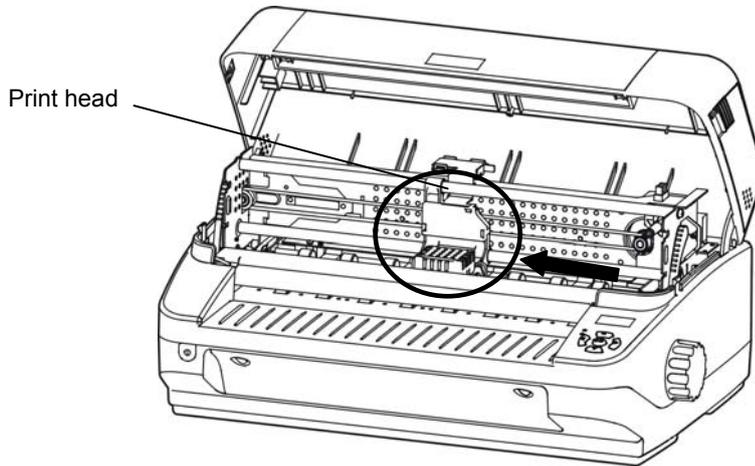


Figure 2-6 Move the print head to the middle position

2. Untie the upper frame lever of both sides, pull the upper frame up, and switch off the power.

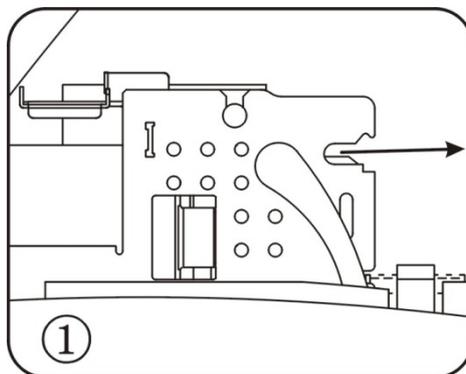


Figure 2-7 Pull up the upper frame

3. Hold the edge of the paper guide slice of both sides, and turn over it downwards.

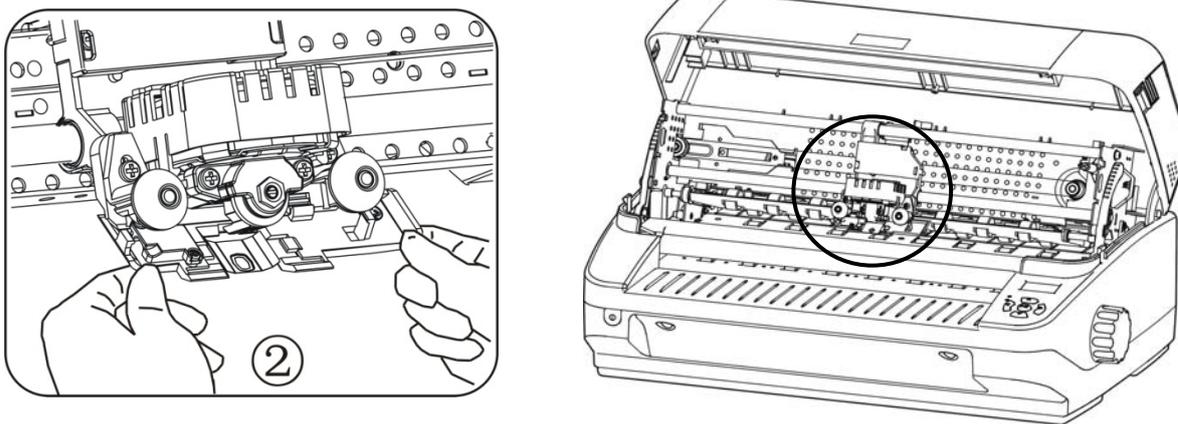


Figure 2-8 Turn over the guide of the carriage

4. Buckle the bottom and upper button of the ribbon frame in turn into the slot of the printer frame.

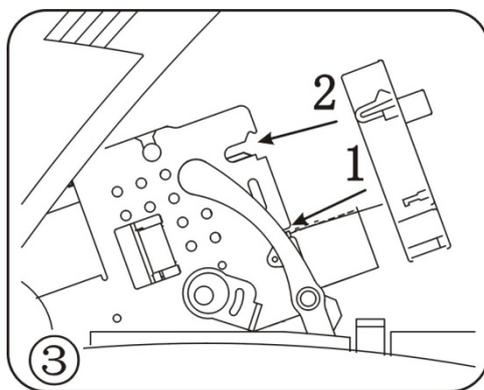


Figure 2-9 Installing the ribbon cartridge

5. Fix the ribbon core into the ribbon path.

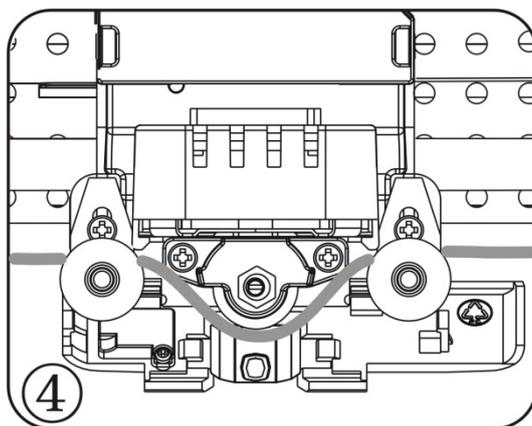


Figure 2-10 Installing the ribbon core

6. Turn the ribbon knob in the direction of the arrow to remove any slack from the ribbon. Then close the ribbon guide board.

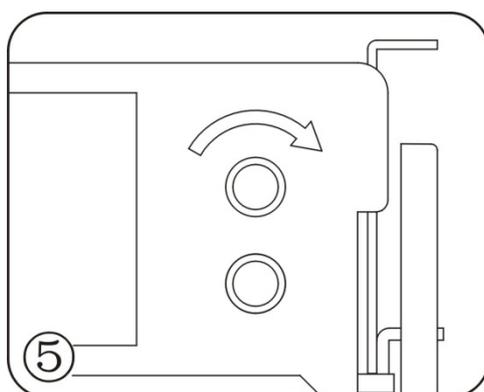


Figure 2-11 Tighten up the ribbon core

7. Press down the upper frame and pull the upper frame lever to the front, lock the upper frame lever by pulling it backwards after the upper frame is in correct position. At last, close the upper cover.

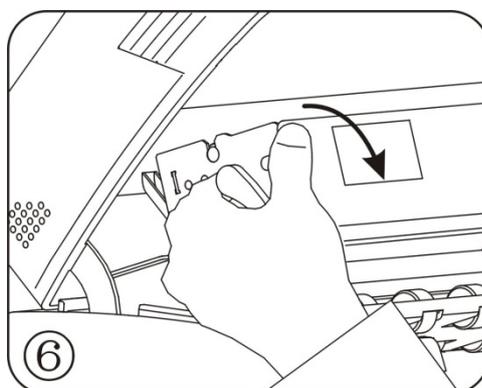


Figure 2-12 Lock the upper frame

Note: 1. When you remove the ribbon cartridge, please refer to the description on the right and follow the steps.

2. When the print out becomes faint, you need to replace the ribbon cartridge. Use of worn out ribbon will damage the print head.
3. Never move the print head when the printer is ON condition or else the printer may be damaged. Don't touch the print head as it will be hot during printing.
4. Use genuine Jolimark JMR115 consumables or else warranty will be void.

2.5 Connecting to Your Computer

The printer can be configured with a parallel interface, USB interface, serial interface and Ethernet interface. (According to specific interface standards) Connect your computer to the desired interface as your requirement. (Show as picture 2-13, 2-13, 2-14 and 2-15)

Note: Before connecting the parallel interface, please make sure the power of the printer is shut down. Must after tighten the cable you may turn on the power, or it will damage the printer.

2.5.1 Connecting the Parallel Interface

1. Turn off both the computer and the printer. Plug the parallel cable connector securely into the printer's parallel interface. Squeeze the wire clips together until they lock in place on either side of the connector.
2. Plug the other end of the cable into the computer's parallel interface; then tighten the screws on either side of the connector.

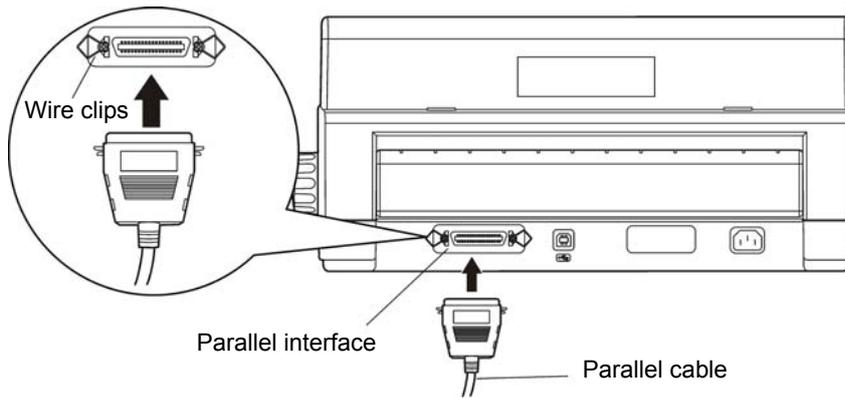


Figure 2-13 Connecting the parallel interface

2.5.2 Connecting the USB Interface

1. Plug the USB cable A end (flat shape) into the computer's USB interface.
2. Plug the USB cable B end (square shape) into the printer's USB interface.

Caution: Don't impact the plug after connecting to the USB interface.

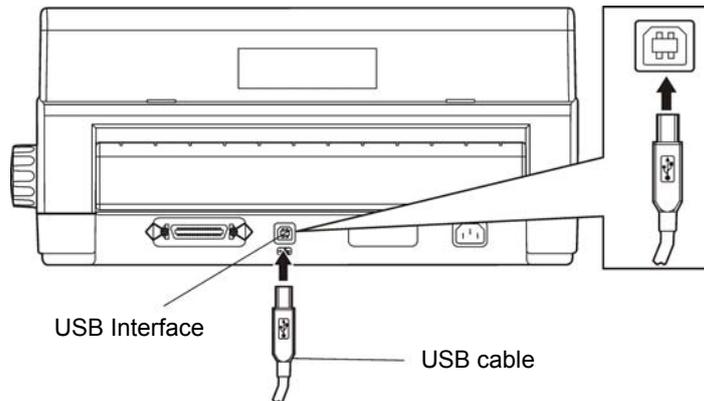


Figure 2-14 Connecting the USB interface

2.5.3 Connecting the Serial Interface Cable

1. Turn off both the computer and the printer. Plug the serial interface cable connector securely into the printer's serial interface. Then tighten the screws on either side of the connector.
2. Plug the other end of the cable into the computer's serial interface; then tighten the screws on either side of the connector.

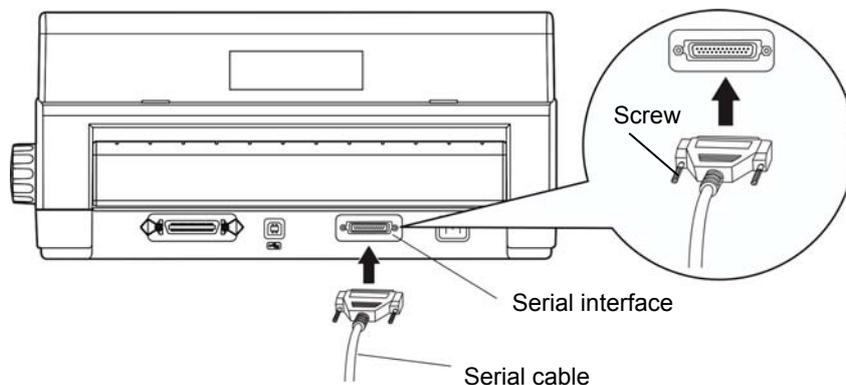


Figure 2-15 Connecting the serial interface cable

2.5.4 Connecting the Ethernet Interface Cable

Plug the crystal end of the Ethernet interface cable (RJ-45) into the printer's Ethernet interface, and then plug the other end into the LAN's entrance as shown in Figure 2-16.

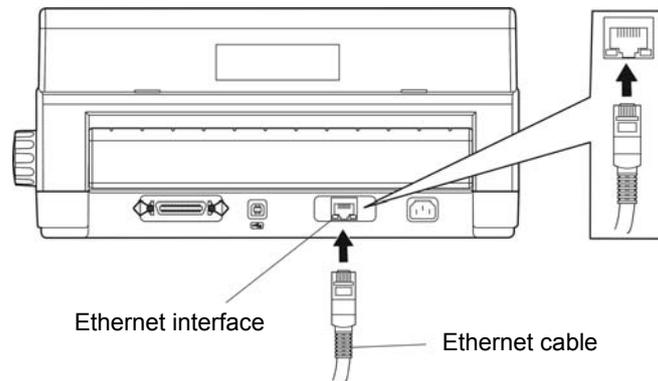


Figure 2-16 Connecting the Ethernet interface cable

Note: Please refer to the *user's manual* for the detailed instructions of internet settings.

2.6 Connect the Power Cord

1. Make sure the power switch on the printer is turned off.
2. Make sure the voltage required by the printer matches that of your electrical outlet.
3. If the power cord is not attached to the printer, connect it to the power supply inlet on the printer.
4. Plug the power cord into a properly grounded electrical outlet. (show as figure 2-17)

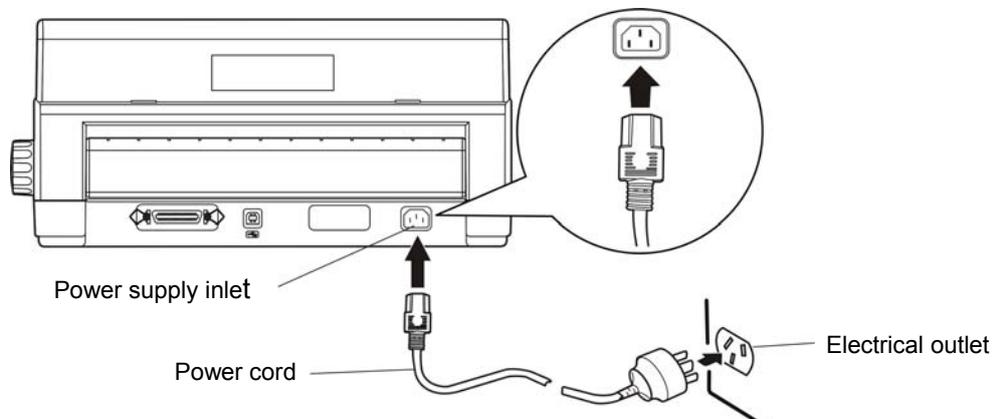


Figure 2-17 Connecting the power cord to the printer

Note: 1. If the rated voltage and your outlet voltage do not match, contact your dealer for assistance. Do not plug in the power cord.

2. You should use the properly grounded electrical outlet

2.7 Installing the Driver

Please use the cable to connect computer with printer, then turn on the computer and the printer, put the driver CD into the CD-ROM. Install driver by the following ways:

Auto-installing way

Double click the file "Setup.exe" in the driver disc, install driver by the following direct.

Note: Auto-installing way needs the operating system of Windows 2000 or above.

Hand operated installing way

Note: The hand-operated installing ways of serial interface and parallel interface are the same.

1) The installing steps of parallel interface for Windows 2000/XP/Vista are as follows:

- 1 Click "Start" → "Settings" → "Select Printers".
2. Click "Add Printer", then it pops up a window of "Add Printer Wizard", click "Next", then please read the select guide carefully, such as, select "Local printer" in the "Local or Network Printer" window, then click "next".
3. A window of "Select a Printer Port" pops up, select a usable port. Such as, select "LPT1: (Recommended Printer Port)", click "Next".
4. A window of "Install Printer Software" pops up, click "Have Disk...", click "Next".
5. A window of "Install From Disk" pops up. Please according to the operating system environment, you should select the path as follow: CD-ROM → "Driver" → "WIN2000 (XP-Vista-Win7)", click "Open", then click "OK" to return to the window of "Install Printer Software", select the respective model, click "Next".
6. Follow the guide click "Next" gradually till the installation is finished.

2) The installing steps of parallel interface for Windows 7 are as follows:

1. Click "Start" → "Device and Printers".
2. Click "Add Printer", then it pops up a window of "Add Printer Wizard", click "Next", then please read the select guide carefully, such as, select "Local printer" in the "Local or Network Printer" window, then click "next".
3. A window of "Select a Printer Port" pops up, select a usable port. Such as, select "LPT1: (Recommended Printer Port)", click "Next".
4. A window of "Install Printer Software" pops up, click "Have Disk...", click "Next".
5. A window of "Install From Disk" pops up. Please according to the operating system environment, such as Windows XP operating system, you should select the path as follow: CD-ROM → "Driver" → "WIN2000 (XP-Vista-Win7)", click "Open", then click "OK" to return to the window of "Install Printer Software", select the respective model, click "Next".
6. Follow the guide click "Next" gradually till the installation is finished.

The USB interface installing steps for Windows 2000/XP/Vista/Win7 are as follows:

The following steps are used Windows XP as example. There are slight differences among different operating systems.

1. Connect the printer to computer with an USB cable and turn on the printer.
2. After the computer find out new hardware and finish searching, pop up a window of "Found New Hardware Wizard", choose "Install from a list or specific location (Advanced)", click "Next".
3. A window of "Found New Hardware Wizard" — "Please choose your search and installation options" pops up, choose "Don't search, I will choose the driver to install", click "Next".
4. A window of "Add Printer Wizard" pops up, click "Have Disk...", click "Browse".
5. A window of "Install From Disk" pops up. Please according to the operating system environment, you should select the path as follow: CD-ROM → "Driver" → "WIN2000 (XP-Vista-Win7)", click "Open", then click "OK" to return to the window of "Add Printer Wizard", select the respective model, click "Next".
6. Follow the guide click "Next" gradually till the installation is finished.

The installing steps for Windows 98 are as follows:

(1) The installing steps with a parallel cable or a serial cable:

1. Click "Start" → "Settings" → "Printers".

2. Click "Add Printer", then a window of "Add Printer Wizard" pops up, click "Next", then please read the select guide carefully, such as, select "Local printer" in the "Local or Network Printer" window, then click "Next".
3. A window of "Click the manufacturer and model of your printer" pops up, click "Have Disk...", please click "Browse", select the path as follow: CD-ROM → "Driver" → "WIN98 (WINME)", then click "OK".
4. A window of "Install From Disk" pops up, click "OK", return to a window of "Add Printer", select the respective model, and then click "Next".
5. A window of "Printer port" pops up, select "Available ports", such as, select "LPT1: Printer Port", click "Next", and then show the printer's name. If the system is not installed by other printer driver process, the printer is treated as default printer by the application process of Window98 environment, click "Next". Otherwise according to prompt, choose the printer is default: "Yes", click "Next", choose "Yes-(recommended)", click "Finish". A window of "Printer test page completed" pops up, click "Yes".
6. The printer driver process is installed successfully.

(2) The installing steps with an USB cable:

Note: 1. As the system of Windows 98/ME doesn't have integrated USB driver control, please install USB driver before using USB interface printing. Then install USB printer driver.

2. If it has installed the USB driver, please install the USB printer driver directly as the following steps.

USB driver installing steps:

1. Connect an USB cable and turn on the printer.
2. After the computer find out new hardware and finish searching, a window of "Add New Hardware Wizard" pops up, click "Next".
3. A window of "Add New Hardware Wizard" — "Windows operation" pops up, choose "Search the best driver for the device (recommended)", and click "Next".
4. A window of "Search for new drivers" pops up, check "Specify a location", click "Browse", select the path as follows: CD → ROM → "Driver"-["WIN98 (WINME) \ USBdriver]", then click "OK".
5. Return to a window of "Search for new drivers", click "Next"; a window of "Windows driver file search for the device" pops up, click "Next".
6. After the system finishing installing the file automatically, a window of "USB Print Supported" pops up, click "Finish".
7. The printer USB driver process is installed successfully.

USB printer driver installing steps:

1. Click "Start" → "Settings" → "Printers".
2. Click "Add Printer", then a window of "Add Printer Wizard" pops up, click "Next".
3. A window of "Click the manufacturer and model of your printer" pops up, click "Have Disk...", please click "Browse", select the path as follow: CD-ROM → "Driver" → "WIN98 (WINME)", and then click "OK".
4. A window of "Install From Disk" pops up, click "OK", return to a window of "Add Printer", then click "Next".
5. A window of "Printer port" pops up, select "Available ports", select "JMUSB", click "Next", and then show the printer's name. If the system is not installed by other printer driver process, the printer is treated as default printer by the application process of Window98 environment, click "Next". Otherwise according to prompt, choose the printer is default: "Yes", click "Next" choose "Yes-(recommended)", click "Finish". A window of "Printer test page completed" pops up, click "Yes".
6. The printer driver process is installed successfully.

2.8 Network Settings

Please use Jolimark network setting software NetFinder to set the IP address for Jolimark printers, which can be found in the CD or downloaded from www.jolimark.com.

Note: The network printing function needs the operation system of Windows2000 or above.

2.8.1 Connecting Printer


Power on the printer, connect with the Ethernet cable which has been connected to LAN, and look into the information of Ethernet LED indicator to ensure the printer has entered into the normal connection.

Yellow LED	Green LED	Description
ON	Blink	Connecting to network
OFF	OFF	Not connecting to network

2.8.2 Setting IP Address

1. Run NetFinder Software

Double click NetFinder.exe in the PC which connects the printer in the same LAN. The figure of the software is shown as follows:

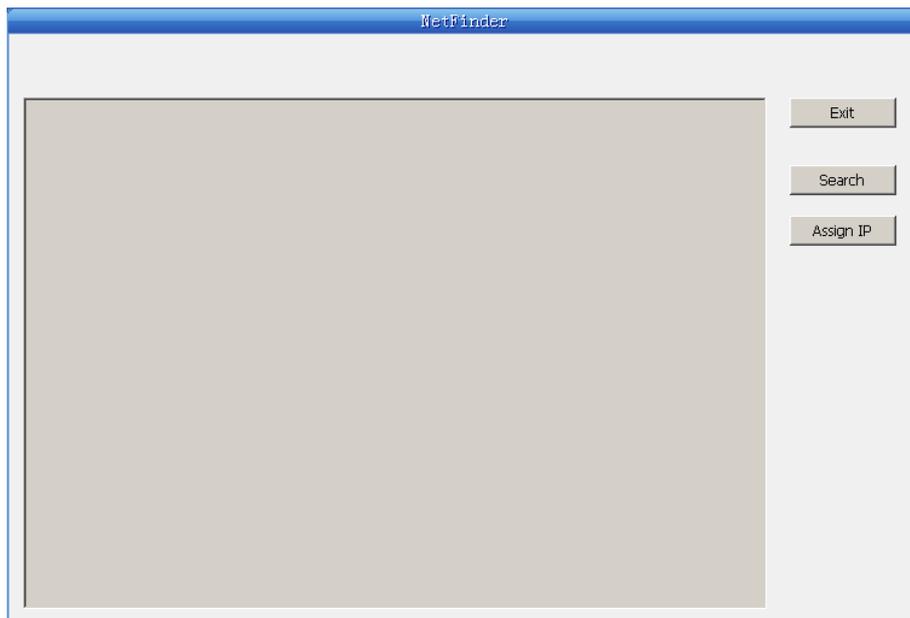

Button description:


Exit — Exit from the software

Search — Search printers in the same LAN

Assign IP — Modify the IP address and other settings for the specified printer.

2. Search printer


Click "Search" button in the main interface, the dialog box appearing would begin searching automatically and show appearance, listing a printer in the main interface if found. The time is counting down in the progress bar (10s in total) and the search would finish as soon as the time is over. When going on searching, press "search" button again.

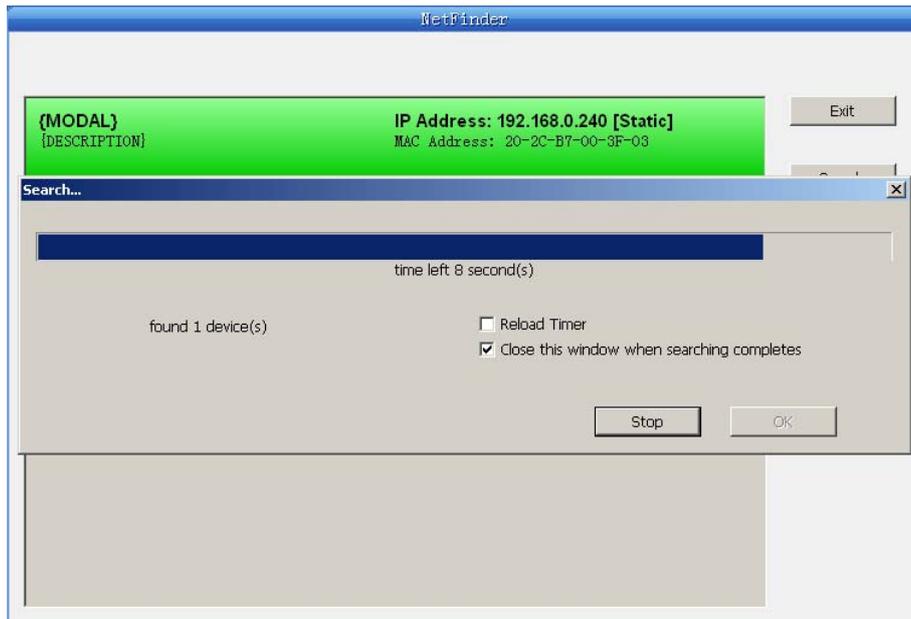

If the printer still can not be found out when the network connection is correct and in the same network, please check whether the network fire wall on the PC open or not. If there is fire wall, please close it temporarily, open again after finishing searching and setting a printer completely.

3. Setting printer's IP address

The printer's information is listed in the main interface, the left side of which is the model and description and the right are the IP address and MAC address. What's more, the assign mode (dynamic/static) is noted behind the IP address.

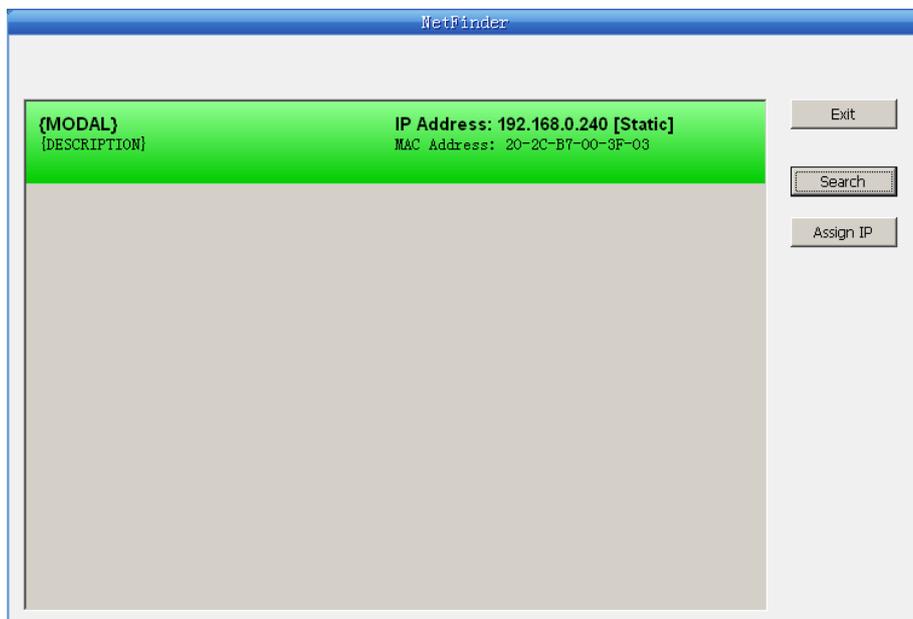

1) Correlative description for IP address settings

In order to search and set printer's IP address conveniently for the first time, the factory default setting is DHCP mode which assigns IP address dynamically. If there is no DHCP server in the connected LAN and printer is set to DHCP mode as well, then it would use the internal pre-set address (IP: 10.0.0.1, Subnet Mask: 255.255.255.0) automatically.

It is suggested that printer's IP set to static in actual usage, which can cut down the time when initializing the Ethernet interface as the printer is turned on and prevent IP conflicts (The dynamic address used in printer may conflict with another one). The network segment part of the IP address and Subnet Mask must be the same as those of PC connecting with a printer. For example, the address of working PC is 192.168.0.1/255.255.255.0 (IP/Subnet Mask), then which of printer should be set to 192.168.0.x/255.255.255.0 (x=2~254 and should avoid the IP in used. It is not restricted for NetFinder to search printers in the same network but different segment parts (can not stride gateway). Relative glossary of IP address may refer to corresponding information.

2) Setting printer's IP address

Select the printer information to be modified (black frame appears), click "Assign IP" button. Set the IP in the dialog box appearing.

Check the "Use DHCP" if need to assign dynamic address, the settings above would be disabled automatically. Please make sure there is a DHCP server in the network, or the printer can not receive an effective IP address.

When to specify static address, uncheck "Use DHCP" and fill in "IP address", "Subnet Mask" and "Default Gateway". If there is no gateway in the network, fill 255.255.255.255 in the "Default gateway". "IP address" and "Subnet Mask" should obey the assigning rules of local LAN (Ethernet), please enquire the administrator of networks which the printer connects to for more details.

Click "OK" to send address setting information to the specified printer. The printer takes response after "Close this window on success" is checked, and then this dialog is closed automatically. Select "Reload Timer" then the software would wait for the printer's response. Generally, printer would take response in a circle time if network connection is correct.

Click "Cancel" if you abandon the modification.

Click "Search" in the main interface again to update printer information after modifying the printer's IP address.

3) Report printer's IP address

Report the printer's IP address, which would be used in the section "Newly-install printer network driver" or "Upgrade-install printer network driver (setting driver's network port)".

2.8.3 Installing Printer Network Driver

The ways of installing network driver are classified into Newly-install way and Upgrade-install way


according to whether the PC installs the printer driver or not.

If the printer driver hasn't been installed on the PC, adopt newly-install way whose steps are shown in "Newly-install printer network driver".


If the printer driver has been installed on the PC, adopt Upgrade-install way whose steps are shown in "Upgrade-install printer network driver".

1. Newly-install printer network driver


- 1) Click "Start" → "Settings" → Select "Printers".
- 2) Click "Add printer", then a window of "Add Printer Wizard" pops up, click "next", then please read the select guide carefully. Such as, select "Local or Network Printer", then click "next".
- 3) A window of "Select the Printer port" pops up, select a port you want your printer to use. For example, select "Create a new port", select "Standard TCP/IP Port" in the port, click "next".

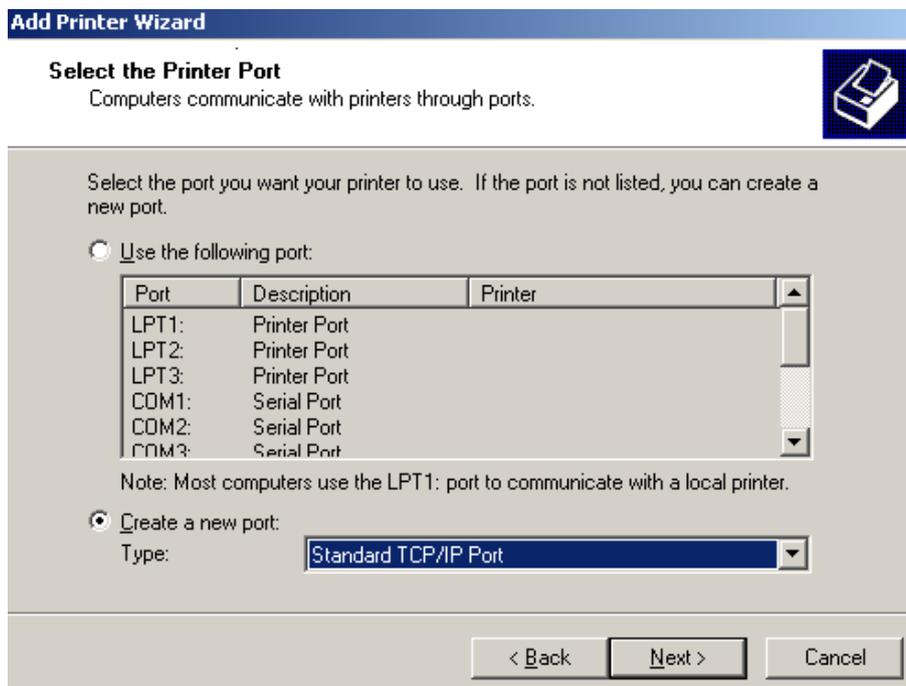


- 4) A window of "Add standard TCP/IP Printer Port Wizard", click "Next".
- 5) A window of "Add Port" pops up, enter the IP address reported by the "Setting printer's IP address" in the "Printer Name or IP Address" column. Take IP address "192.168.0.240" for example. "Port Name" is created automatically after finishing filling in IP address.

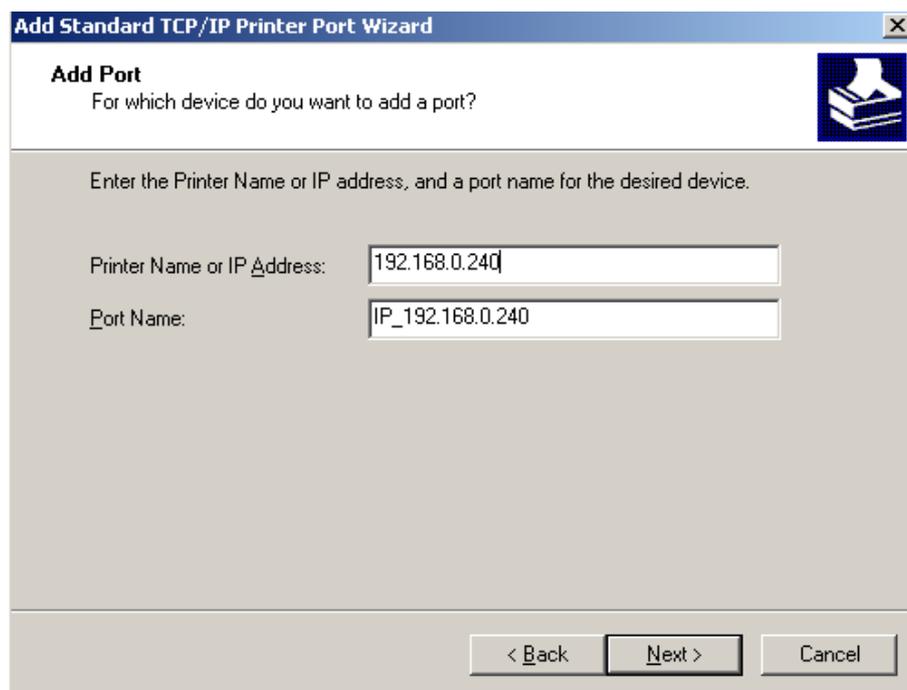

- 6) A window of "Additional Port Information Required" pops up, select "Custom" in the "Device Type", then click "Settings".

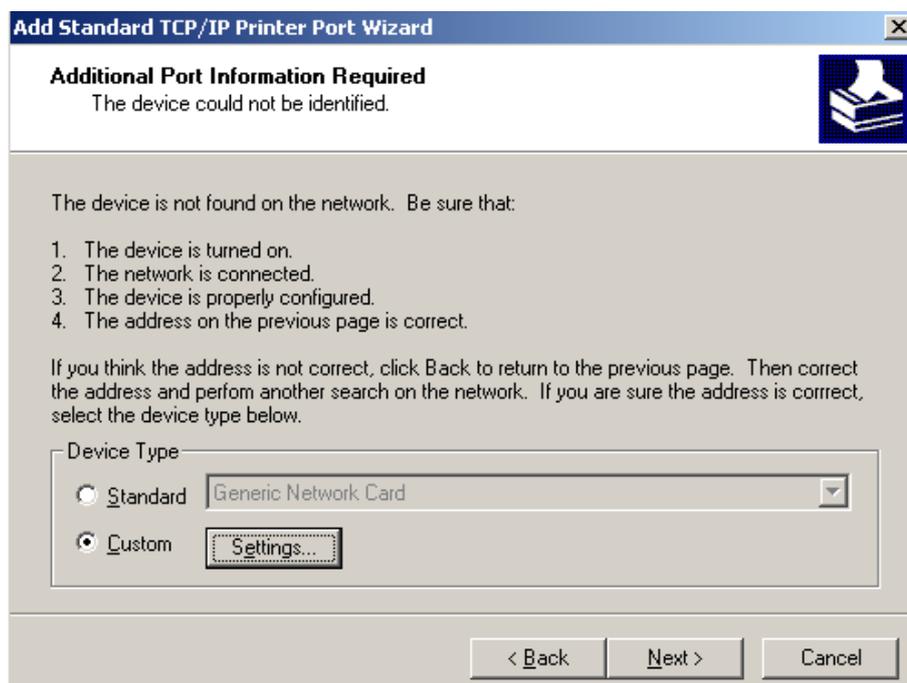

- 7) A window of "Port Settings" pops up. Affirm that "Port name" and "Printer name or IP address" are correct, "Protocol" is "RAW" and "Port Number" is "9100", click "OK".

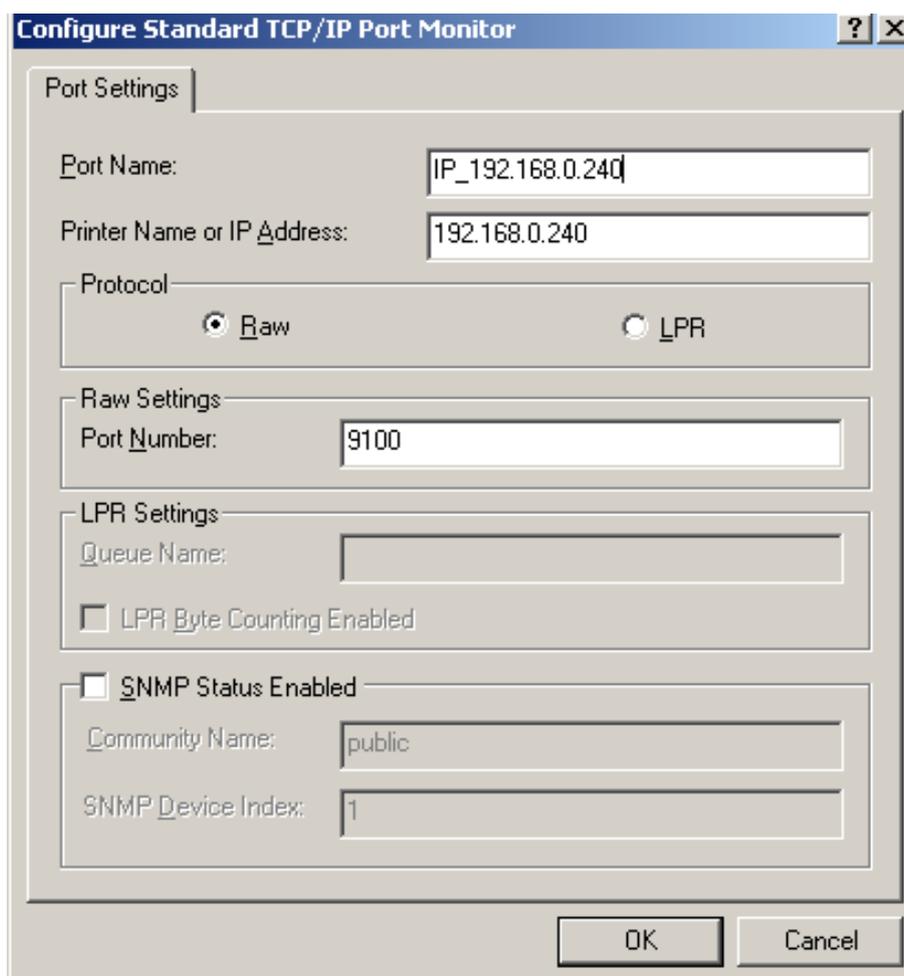


- 8) Return to “Additional Port Information Required”, click “Next”.
- 9) A window of “Completing the Add Standard TCP/IP Printer Port Wizard” pops up, click “Finish”.
- 10) In the selection of “Manufacturers/Printers”, click “Have Disk”, and then click “Next”.
- 11) A window of “Install From Disk” pops up. Please according to the operating system environment, such as Windows 2000/XP/Vista/Win7 operating system you should select the path as follows: CD-ROM → “Driver” → “WIN2000 (XP-Vista-Win7)”, click “open”, then click “OK”, then return to the window “install printer software”, select the respective model, click “next”.
- 12) Follow the direct click “next” gradually till the installation is finish. At this time, printer network driver is installed completely.


2. Upgrade-install printer network driver (setting driver's network port)

If PC has installed the printer's driver, set driver's network port to carry out network printing. The concrete steps are shown below:

- 1) Click “Start” → “Settings” → “Select Printers”.
- 2) Right click BP-1000K driver, click “Properties” on the window popping up.
- 3) A window of “Properties” pops up, click “Ports” and “Add Ports”.

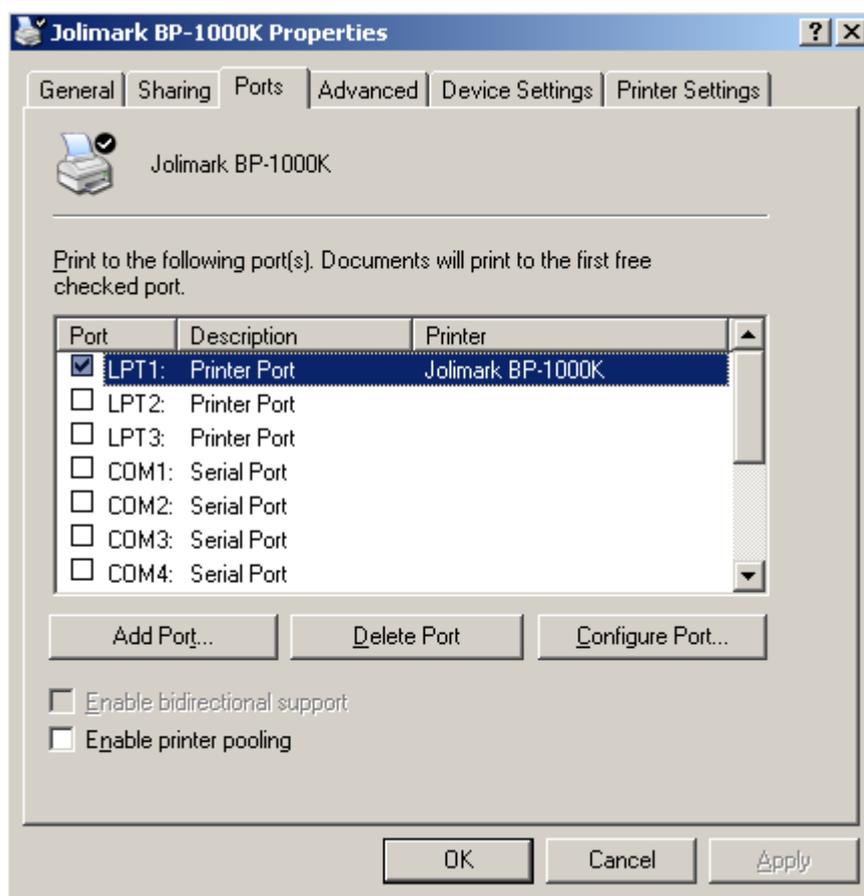


4) A window of "Printer port" pops up, select "Standard TCP/IP Port", click "New port".

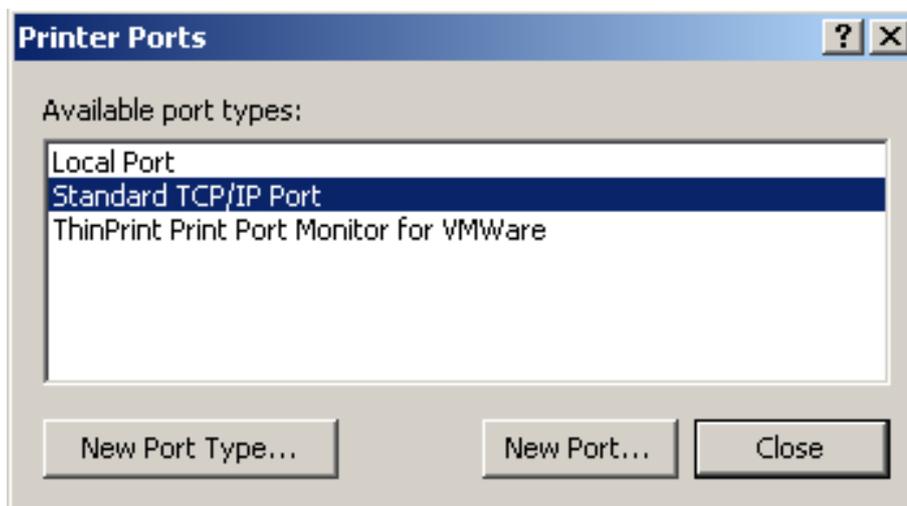


5) A window of "Add Standard TCP/IP Printer Port Wizard" pops up, click "Next".


6) A window of "Add a port" pops up, import the IP address reported by the "Setting printer's IP address" in the "Printer name or IP address" column. Take IP address "192.168.0.240" for example. "Port name" is created automatically after finishing filling in IP address. Click "Next".

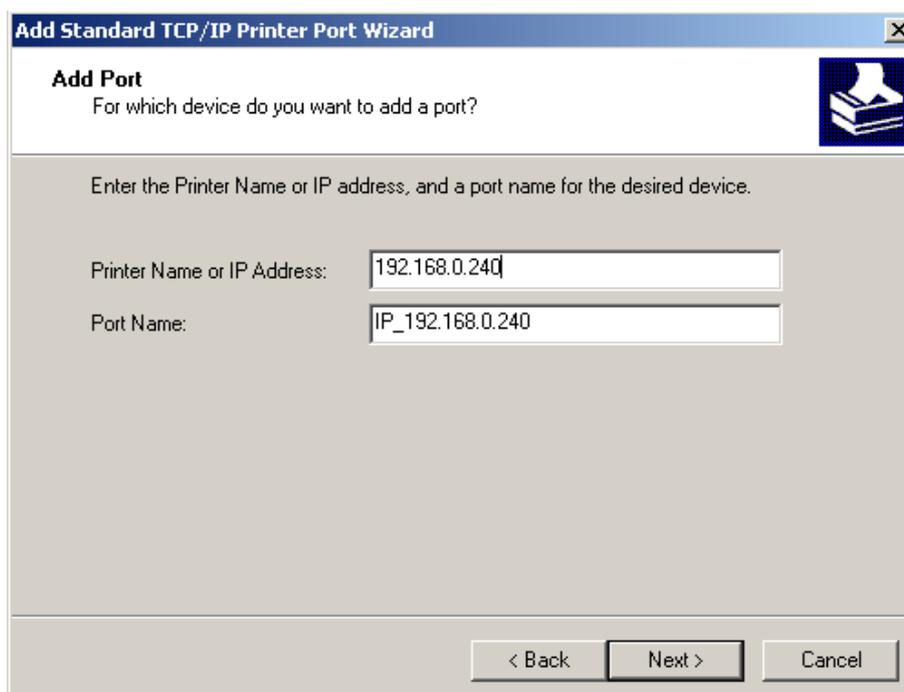

- 7) A window of "Additional Port Information Required" pops up, select "Custom" in the "Device Type", then click "settings".

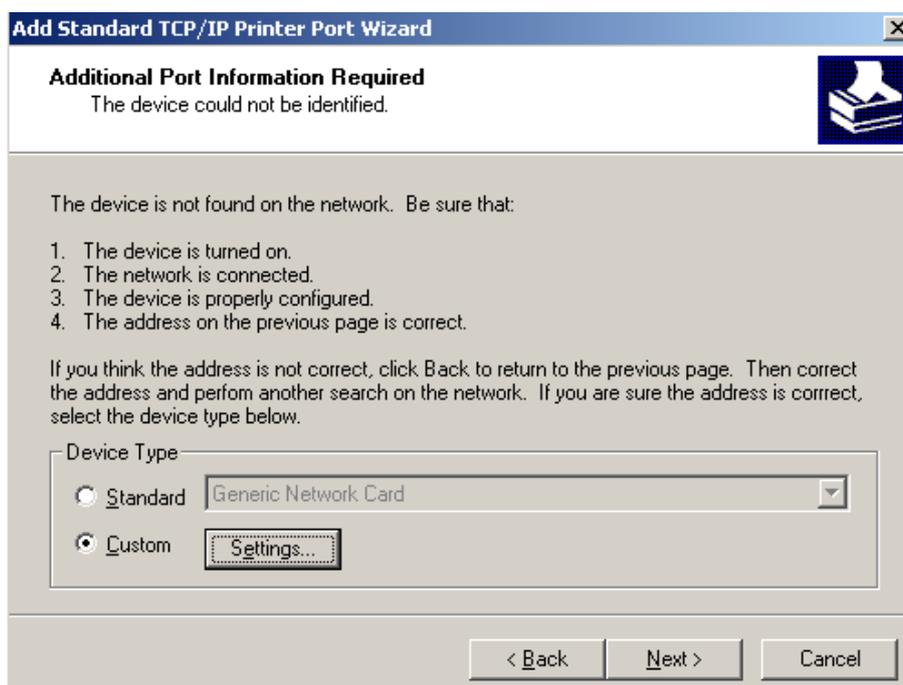


- 8) A window of "Port Settings" pops up. Affirm that "Port name" and "Printer name or IP address" are correct, "Protocol" is "RAW" and "Port Number" is "9100", click "OK".

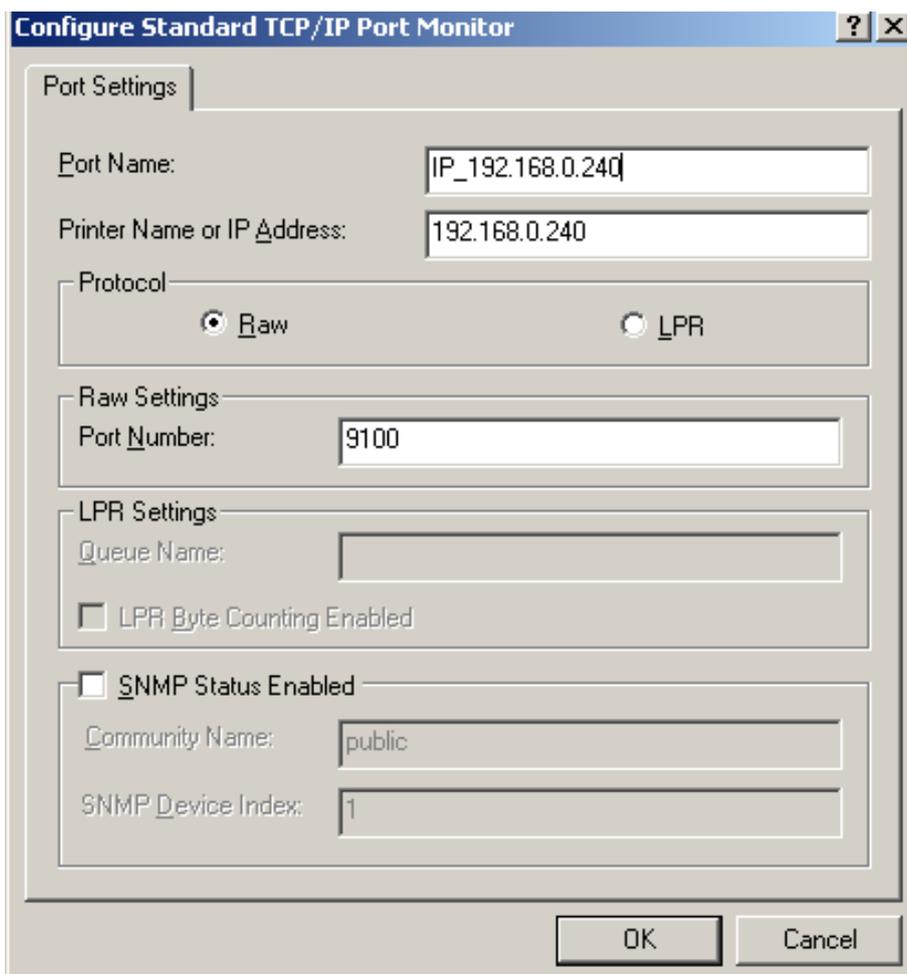


9) Return to "Additional Port Information Required", click "Next".

10) A window of "Completing the Add Standard TCP/IP Printer Port Wizard" pops up, click "Finish".

11) Return to "Printer Ports", click "Close".

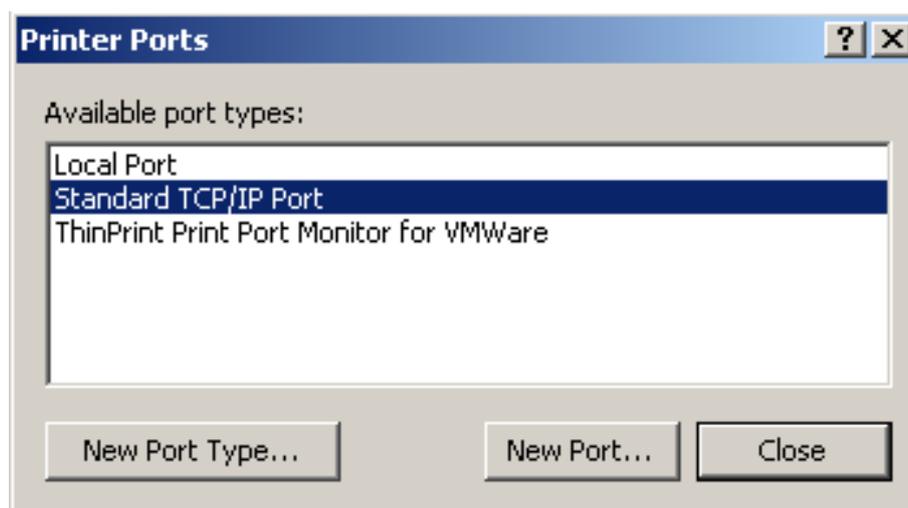

12) Return to "Properties", make sure the network port is selected, click "Apply", and then click "Close". Thus, printer's network port setting is finished.

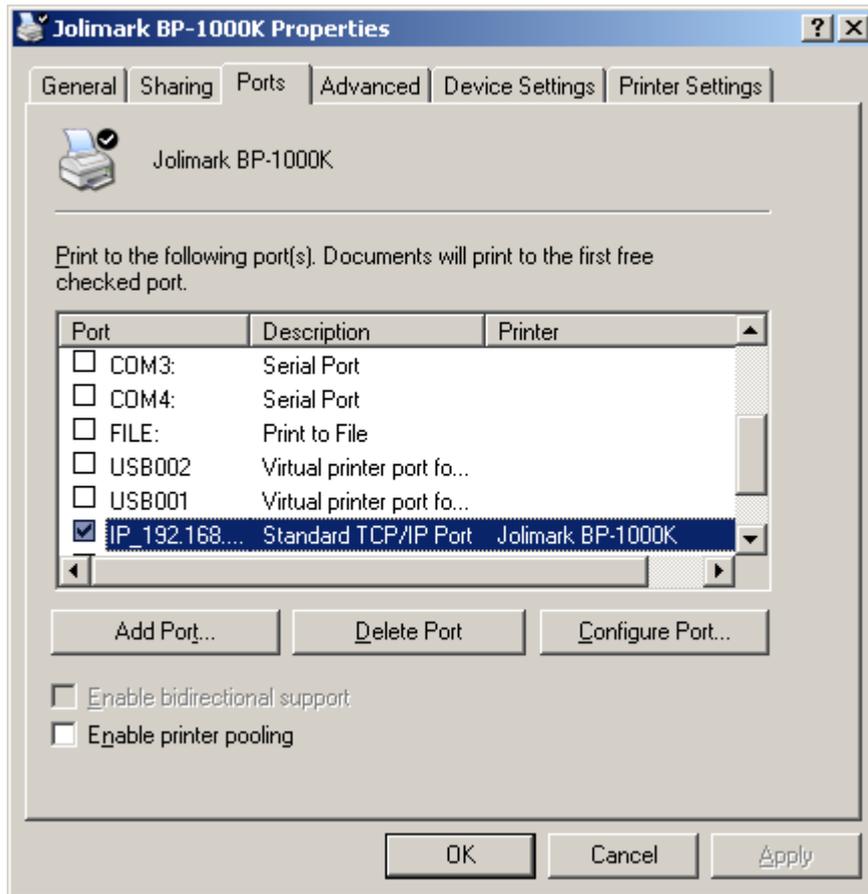

Chapter 3 Paper Process

3.1 Paper Switch

When this printer leaves factory it configures with four paper process modes, that are cut sheet mode, passbook mode, thick paper mode and continuous paper mode.

- 1) Cut sheet mode (Front feed): It is fit for the medium of A4 and thin paper.
- 2) Passbook mode (Front feed): It is fit for the medium of passbook and vertical certificate which thickness is less than 2mm.
- 3) Thick paper mode (Front feed): It is fit for the medium or the certificate which the thickness is over 2mm.
- 4) Continuous paper mode (Rear feed): It is fit for the tractor paper printing.

You can base on the print medium as your actually need to choose the respective paper process mode (Cut sheet, passbook, thick paper or continuous paper).

Please check the detail way of switching paper in Chapter 4 Control Panel.

3.2 Loading the Cut Sheet

You can feed a piece of cut sheet and a single piece of multi-ply paper which maximum is 7 plies (1 original + 6 copies). Follow the steps as below to load cut sheet:

1. Turn on the printer and setting the paper process to cut sheet mode.
2. Place the cut sheet on the front platform and feeding the paper into the printer within the scale scope of which sign above the paper entrance of the printer. After the printer auto skew adjustment, the paper would be sent to the printing home position, and then it is ready to be printed.
3. When loading both single piece of the multi-ply notes and multi-ply tractor paper, you should read the reference below to set the copy mode.

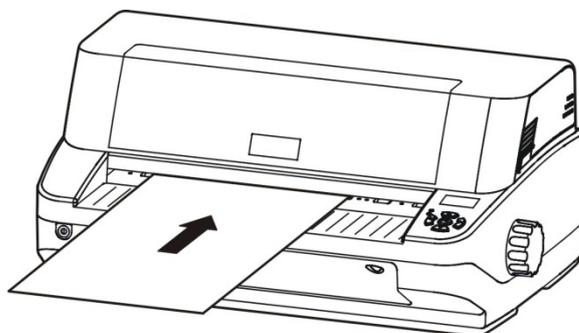


Figure 3-1 Loading cut sheet

Table 3-1: Copy mode setting reference

Copy paper (Including original pattern)	Paper thickness (mm)	Copy mode setting on the control panel
1 or 2	0.06~0.12	Normal
3 or 4	0.18~0.24	1+ 3 copy mode
5	0.30	1+ 3 copy mode
6	0.36	1+6 copy mode
7	0.45	1+6 copy mode

Note: 1. Please refer to Chapter 4 Control Panel for the setting method of copy mode.

2. Normal mode fits for the medium of thin papers, cut sheets, 1+1 ply notes and cards.

3. 1+3 copy mode fits for the 1+2~4 ply paper, passbook, registered permanent residence book, driving license, various license, etc..
4. 1+6 copy mode fits for 1+5 ply or 1+6 ply papers.

3.3 Loading the Passbook

Follow the steps as below to load passbook:

1. Turn on the printer and setting the paper process to passbook mode.
2. Open the passbook, turn to the page which should be printed and make it flat.
3. Place the passbook on the front platform and feeding the passbook into the printer within the scale scope of which sign above the paper entrance of the printer. After the printer auto skew adjustment, the passbook would be sent to the printing home position, and then it is ready to be printed.

Note: 1. When printing on passbook which thickness is less than 2mm, you also could set the paper process to cut sheet mode, but the printing effect of passbook mode is better than that of cut sheet mode.

2. Don't feed a passbook with creases or rip.

3. Close the upper cover before printing or it would not print.

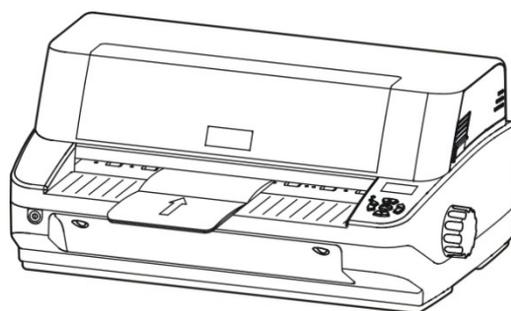


Figure 3-2 Loading the passbook

3.4 Loading the Vertical Certificate

Follow the steps as below to feed vertical certificate:

1. Turn the printer on and setting the paper process to passbook mode.
2. Open the certificate, turn to the page which should be printed and make it flat.
3. Place the certificate on the front platform and feeding the certificate into the printer within the scale scope of which sign above the paper entrance of the printer. After the printer auto skew adjustment, the certificate would be sent to the printing home position, and then it is ready to be printed.

Note: 1. Don't feed a certificate with creases or rip.

2. Close the upper cover before printing or it would not print.

3. The thickness difference of right pages and left pages should not over 1.2mm.

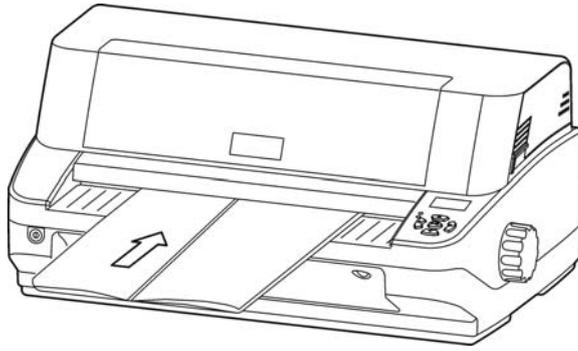


Figure 3-3 Loading the vertical certificate

3.5 Loading the Thick Paper

Follow the steps as below to feed the paper which the thickness is over 2MM:

1. Turn on the printer and setting the paper process to thick paper mode.
2. Open the certificate, turn to the page which should be printed and make it flat.
3. Place the certificate on the front platform and feeding the certificate into the printer within the scale scope of which sign above the paper entrance of the printer. After the printer auto skew adjustment, the certificate would be sent to the printing home position, and then it is ready to be printed.

Note: 1. Don't feed the certificate with creases or rip.
2. Close the upper cover before printing or it would not print.

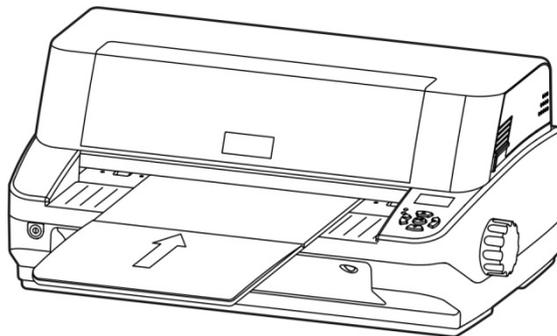


Figure 3-4 Loading the thick certificate

3.6 Installing Tractor Paper

1. Remove the rear cover of the tractor on the rear of the printer.

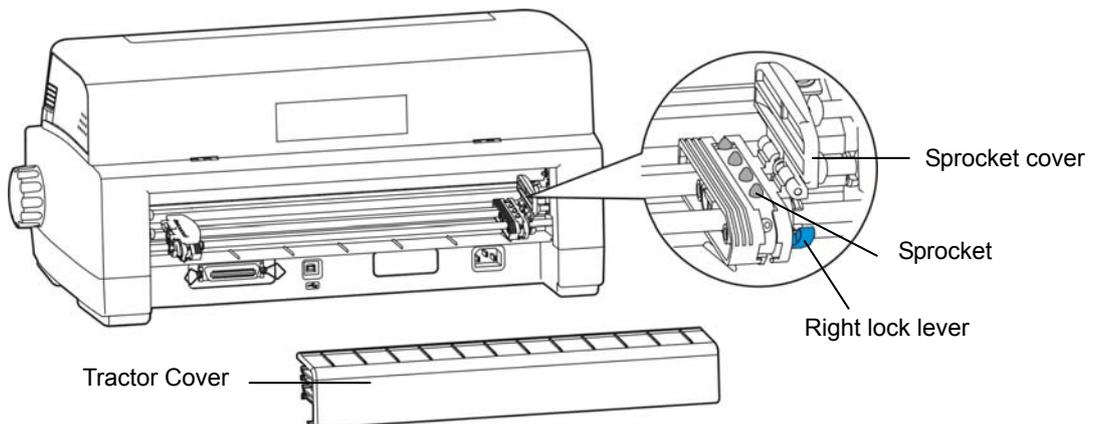


Figure 3-5 Remove the tractor cover

2. Connect the printer and turn on the power, and switch the paper process mode to continuous paper mode. (Please see the operation way in Chapter 4 Control Panel).
3. Loosen the sprocket lock levers of the tractor (optional), and then move the left sprocket to the fitting position, and press down the lock lever to lock the left sprocket.
4. Open the sprocket cover, then install the tractor paper onto the sprockets and close the sprocket cover. (As shown in figure3-6)

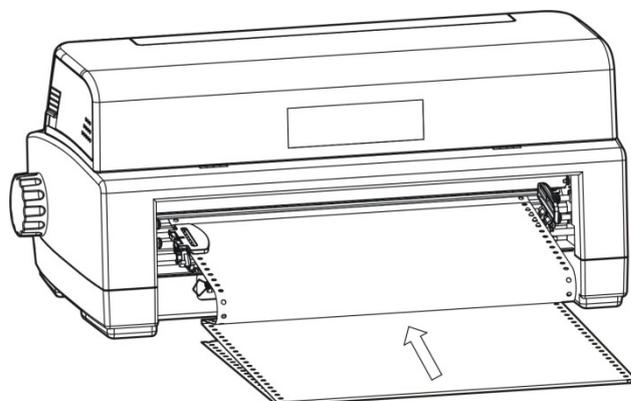


Figure 3-6 Installing the tractor paper onto the sprocket of the tractor (optional)

Remark

Please remember to place the top of paper in level position (Show as figure 3-7).

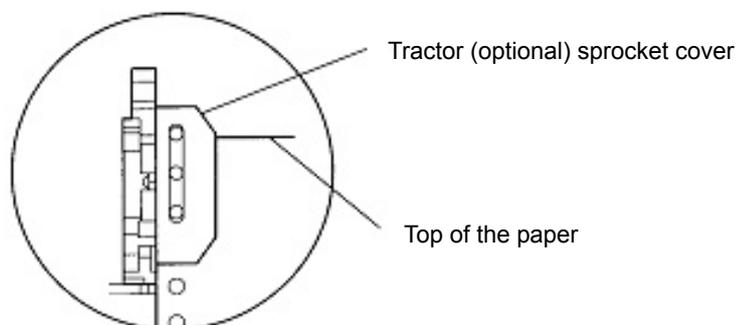


Figure 3-7 Installing the tractor paper on the tractor (optional) sprocket

5. Adjust the position of right sprocket to fit the paper width, and then lock it.
6. If the paper is crinkle, please adjust the right lock lever to the suited position. (Show as figure 3-5)
7. Adjust the paper to the printable position. Please check if the tractor paper fit for the printer printing requirement. If the paper is crinkle, please adjust the right sprocket to the suited position.
8. Refer to table 3-1, according to the paper ply to select the proper copy mode which would make the printing more legible.

3.7 Tearing the Tractor Paper

In the default setting of the printer, the function of feeding paper to tear off position has been opened. After printing, the printer will feed the tractor paper to tear off position automatically. You can tear the paper along the edge of the printer cover. (Show as figure 3-8) If you have changed the default setting and have closed the auto-feed paper to tear off function, press the key of **Load/Eject** after printing, the printer will feed the tractor paper to tear off position. Before tearing the tractor paper, if the paper perforation does not reach the edge of the cover, please adjust the tearing position. (Refer to Chapter 4 Control Panel)

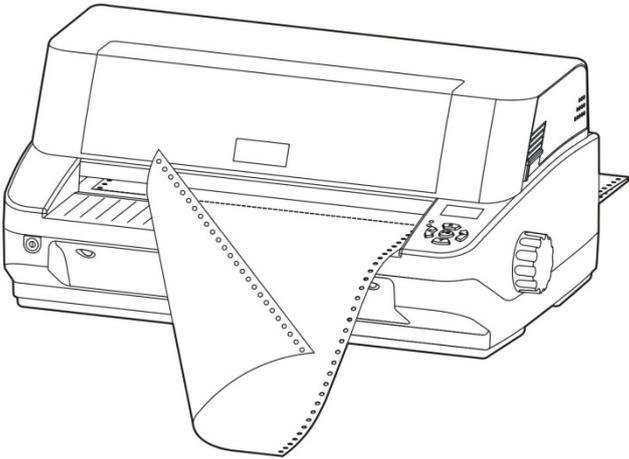


Figure 3-8 Tearing the tractor paper

Chapter 4 Control Panel

4.1 Key, Indicator Light and LCD Display on Control Panel

There are five keys, two LED indicator lights and a LCD display on control panel. (Show as figure 4-1)
The LCD display is a dot matrix display module (106×56dots), and the display dimension is 32.6mm×17.6mm.

- ◆ The control panel is shown as the following figure:

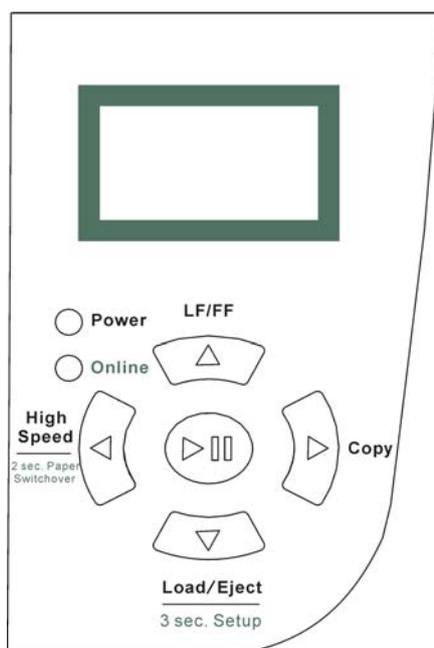


Figure 4-1 Control panel

- ◆ The meaning of indicator show as follow table:

Table 3-1: The meaning of indicator light on the control panel

Indicator light	Off	On	Blink
Power (Red)	Power off	Power on	Paper out or malfunctions occurs
Online (Green)	Offline	Online	—

4.2 Basic Operation of Control Panel

There are five operation keys on the control panel.

▶ Online	Press Online key, switch between Online mode and Offline mode.
▼ Load/Eject	When the printer is offline, in cut sheet mode, press this key can eject cut sheet. In tractor paper mode, press this key when offline can switch the tractor paper among ready position, printing home position and tear off position. (Tractor is optional) When the printer is online, hold on pressing this key for about 3 seconds, the printer will enter Menu setup mode.
▲ LF/FF	In the offline mode, press the LF/FF key to feed the paper line by line. Alternatively, hold the LF/FF key down, the printer will eject the cut sheet, or feed the tractor paper one page.

<p>◀ High Speed</p>	<p>In the offline mode, press High Speed key can switch the speed mode of “Normal Speed”, “High Speed” or “Super High Speed”. At the same time, the LCD display will show you the current printing speed.</p> <p>In the online mode, press the key about 2 seconds, the printer switch among four paper modes of “cut sheet”, “passbook”, “thick paper” or “continuous paper”. At the same time, the LCD display will show you the current paper mode.</p>
<p>▶ Copy</p>	<p>In the offline mode, press Copy key can switch among three copy modes of “Normal”, “1+3 copy” or “1+6 copy”. At the same time, the LCD display will show you the current copy mode.</p>

4.3 The information on the LCD Display When at Stand by State

In the state of stand by (not error state), the printer BP-1000K would display some common state information of the printer on the LCD. The information would towards left cycle roll display as follow format:

Paper information+speed information+copy information+[Self test printing information]

Paper information: 1) Cut sheets 2) Passbook 3) Thick paper 4) Continuous paper


Speed information: 1) Normal 2) High Speed 3) Super high speed

Copy information: 1) Normal 2) 1+3 copy 3) 1+6 Copy

Self test printing information: 1) Chinese self test 2) English self test 3) H printing test 4) Aging test


Hereinto, the paper information would display with an icon, show as follow. While the arrow on the icon is show the way of paper feeding.

1) Cut sheets, show as follow:

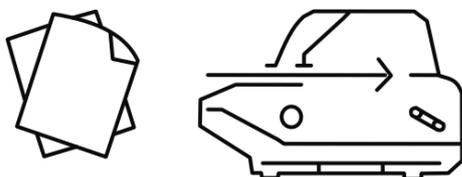

Paper: Cut sheets _ _ _ _


2) Passbook, shown as follow:

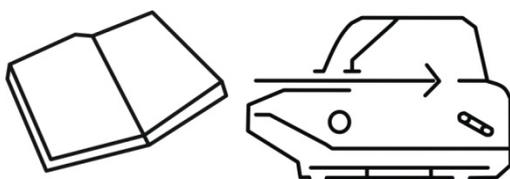

Paper: Passbook _ _ _ _


Note: In this paper mode, LCD display information in not cycle roll.

3) Thick paper, show as follow:

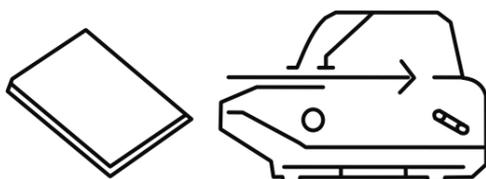

Paper: Thick paper _ _ _ _

4) Continuous paper, show as follow:

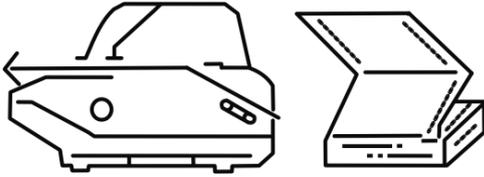

Paper: Continuous paper _ _ _ _

4.4 Use of the Menu Setup System

4.4.1 Change the Current Setting of the Printer

The menu of BP-1000K is containing main menu and sub menu, and displays it on the LCD display. Users can easy setting all the basic functions of the printer.

In online mode, press the “Load/Eject” key for 3 seconds, the printer enters into the menu setup mode.

Press “▲” and “▼” keys, you can select the options in same menu. Hold and press down “▲” and “▼” keys to select quickly.

Press “◀” key, you can go back to main menu or exit the menu setup mode. If current menu is in main menu then would exit the menu setup mode and make the options you just changed take effect at the same time

Press “▶” key to entre the sub menu.

Press “▶II” key to save the setting, and it would mark a “√” on the current selected parameters.

Detailed instruction is shown as follow:

1) After entering the menu setup mode, the LCD display initial data is shown as the following figure:

Menu setting	
1. PRT-SPEED	▶
2. Copy	▶

2) Press“▲”, “▼” keys to choose the menu items (as the following figure shown).


Menu setting	
2. Copy	▶
3. Emulation	▶

There are 35 options in the main menu of BP-1000K:

- 1.PRT-SPEED; 2.COPY; 3.EMULATION; 4.CHAR MODE; 5.FONT; 6.COMPRESS;
 7. AUTO-COMP; 8.PITCH; 9.CHIN.PITCH; 10.LINE SPACE; 11.FORM; 12.PAGE SKIP; 13. TEXT DIR;
 14.GRAPH DIR; 15.LEFT EDGE; 16.SLASH ZERO; 17.CHAR SET; 18.INTL CHAR; 19. CODE PAGE;
 20.LANGUAGE; 21.QUIET MODE; 22.AUTO LF; 23.AUTO CR; 24.TEAR OFF; 25.LOAD PAPER;
 26.SKEW; 27.COVER OPEN; 28.EJECT; 29.BAUD RATE; 30.PARITY; 31.DATA BIT; 32.STOP BIT;
 33.PROTOCOL; 34.BREAK PIN; 35. PIN SWITCH

3) Press “▶” key to enter the sub menu


For example, after choose “PRT-SPEED”, press “▶” key to enter the detailed options about printing speed (as the following figure shown).

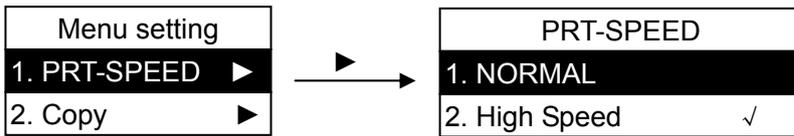


As the right picture shows, the option which marks with a “✓” is the current default setting.

4) Press “▲”, “▼” keys for up and down selection.

For example, if you need to change the speed to “super high speed”, you can press “▲” or “▼” key to choose that, then press “▶||” key to save your selection. New selection would mark with a “✓” after saving. (As the following figure shown)

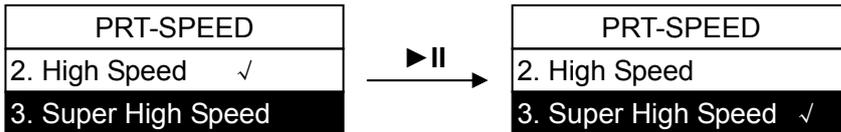

5) Press “◀” key to go back to main menu, then press “◀” key again to exit the menu setup mode and the new setting will take effect at the same time. (As the following figure shown)

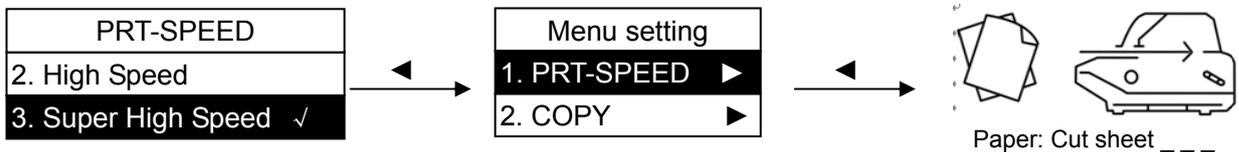

4.4.2 Printing the Current Setting Report

If you need to know current setting, you can print the current setting report by the following steps:

1. Turn off the printer.
2. If use tractor paper, you should install the paper on the tractor (optional) properly.
3. Hold and press down both **Load/Eject** and **LF/FF** keys while turning on the printer, the printer will print out the current setting report. (Shown as figure 4-2)

Jolimark BP-100K**Current Setting Report**

Version: 1000K vx.x xxx/xx/xx

PRINT SETUP

PRT-SPEED	<u>NORMAL</u>	HIGH	HIGH 2				
COPY	<u>NORMAL</u>	ORIG+3P	ORIG+6P				
EMULATION	<u>EPSON</u>	OKI	OLIVETTI	IBM			
CHAR MODE	<u>ASCII</u>	CHINA					
FONT	<u>ROMAN</u>	SANS SER	COURIER	PRESTIGE	SCRIPT	OCR-B	OCR-A
COMPRESS	<u>100%</u>	75%	66%	50%			
AUTO_COMP	<u>OFF</u>	ON					
PITCH	<u>10 CPI</u>	12 CPI	15 CPI	PROPORTIO			
CHIN. PITCH	<u>6.7 CP</u>	7.5 CPI					
LINE SPACE	<u>6 LPI</u>	8 LPI					
FORM	<u>3 INCH</u>	3.5 INCH	11/3 INCH	4 INCH	5 INCH	5.5 INCH	6 INCH
	<u>7 INCH</u>	LETTER	<u>A4</u>	12 INCH	14 INCH		
PAGE SKIP	<u>OFF</u>	ON					
TEXT DIR	<u>BI-DIR</u>	UNI-DIR					
GRAPH DIR	<u>BI-DIR</u>	UNI-DIR					
LEFT EDGE	<u>0/10 INCH</u>	1/10 INCH	2/10 INCH	3/10 INCH	4/10 INCH	5/10 INCH	

CHARACTER

SLASH ZERO	<u>OFF</u>	ON					
CHAR SET	<u>ITALICS</u>	<u>GRAPHICS</u>					
INTL CHAR	<u>U.S.A.</u>	FRANCE	GERMANY	U.K.	DENMARK1	SWEDEN	ITALY
	SPAIN 1	JAPAN	NORWAY	DENMARK2	SPAN 2	LATIN AM	KOREA
	LEGAL						
CODE PAGE	<u>U.S.A.</u>	MULTI	PORTUGAL	CANADA	NORWAY	EAST EURO	CYRILLIC
	RUSSIAN	HUNGARY	KAMENICKY	TURKEY	ICELAND	BULGARIA	MAZOVIA
	GRK 437	GRK 851	GRK8859-7	GRK 1253	ARAB NLS	ARAB EXT	WIN LATI
	WIN LAT2	ISO LTN1	ISO LTN2	TUR8859-9	ISO LTN9	KBL	LATIN 7

SYSTEM SETUP

LANGUAGE	<u>ENGLISH</u>	CHINESE		
QUIET MODE	<u>OFF</u>	ON		
AUTO LF	<u>OFF</u>	ON		
AUTO CR	<u>OFF</u>	<u>ON</u>		
TEAR OFF	<u>OFF</u>	0.3 SEC.	<u>0.5 SEC</u>	1.0 SEC.
LOAD PAPER	<u>PUSH KEY</u>	0.1 SEC	0.5 SEC.	1.0 SEC.
SKEW	<u>OFF</u>	<u>ON</u>		
COVER OPEN	<u>OFF</u>	<u>ON</u>		
EJECT	<u>FRONT</u>	REAR		

SERIAL I/F

BAUD RATE	<u>19200 BPS</u>	<u>9600 BPS</u>	4800 BPS
PARITY	<u>NONE</u>	ODD	EVEN
DATA BIT	<u>8 BIT</u>	7 BIT	
STOP BIT	<u>1 BIT</u>	2 BIT	
PROTOCOL	<u>XON/XOFF</u>	<u>DTR</u>	

BREAK PIN

HEAD PIN	<u>LIVE</u>	PIN 1	PIN 2	PIN 3	PIN 4	PIN 5	PIN 6
	PIN 7	PIN 8	PIN 8	PIN 10	PIN 11	PIN 12	PIN 13
	PIN 14	PIN 15	PIN 16	PIN 17	PIN 18	PIN 19	PIN 20
	PIN 21	PIN 22	PIN 23	PIN 24			
PIN SWITCH	<u>OFF</u>	ON					

Figure 4-2 Printing current setting report

Note: If the printer doesn't install Ethernet interface, the Ethernet interface information of MAC or IP would not be printed out in self-test mode and current setting report.

4.4.3 Menu Item Description

Table 4-2: Menu item descriptions are as follow:

Item	Description
PRT-SPEED	Specify the print speed of printer. Printing resolution is lower while print speed is higher.
COPY	According to customer's printing requirement, select the printing capability.
EMULATION	Specify printer's control commands.
CHAR MODE	Select ASCII or Chinese character mode to print when printer receives character printing task.
FONT	Specify a kind of ASCII fonts to print when printer receives character printing task. If the print data with font instruction, printer gives priority to print data instruction. (Only valid when CHARACTER MODE is choosing ASCII)
COMPRESS	Transverse compress printing is according to corresponding compress proportion.
AUTO-COMP	After selecting this function on, printer would print out transverse compressed content according to the specified percentage in normal speed. When auto-compress mode is selected, printer would detect paper width automatically and choose the proper percentage to print.
PITCH	Specify the ASCII character spacing in characters per inch (cpi).
CHIN. PITCH	Specify the Chinese character spacing in characters per inch (cpi).
LINE SPACE	Specify the line spacing in lines per inch(lpi). If the print data with vertical pitch instruction, printer would give priority to print data instruction.
FORM	Specify the page length of the form, for both cut sheet and continuous paper. Printer feeds to next page according to the specified page length. If the print data with page length instruction, printer would give priority to print data instruction.
PAGE SKIP	After selecting this function on, printer would leave one inch (25.4mm) margin at the perforation of the tractor paper automatically. If the print data with page margin instruction, printer would give priority to print data instruction.
TEXT DIR	Set unidirectional or bidirectional printing for text. Bidirectional (the default) is faster because the printer prints in both directions. Unidirectional is slower but produces better printing quality.
GRAPH DIR	Set unidirectional or bi-directional printing for graphics. It is set to UNI-DIR by default for better quality. (only compatible with EPSON)
LEFT EDGE	Specify the distance between paper left edge and printing home position. (Only valid when ANY POSITION PAPER FEED function is on.)
SLASH ZERO	Select the printing character for zero with a slash(/) or without, to distinguish it from the letter O.
CHAR SET	Specify character set as Italic Character or Graphic Character.
INTL CHAR	Specify the printer internal character set according to different using circumstances of international characters.
CODE PAGE	Select the code page according to different national characters use circumstances.
LANGUAGE	Specify the printer menu language as English or Chinese.


QUIET MODE	Disable or enable the low noise function, when this function is on, print speed would be reduced.
AUTO LF	If this function is on, printer would advance the paper one line automatically after receiving every carriage return instruction.
AUTO CR	After selecting this function on, printer would feed the paper one line after receiving every line feed instruction. Print head would move to the printing home position automatically.
TEAR OFF	After selecting this function on, when the printer has finished printing, paper would be fed to the set tear off position automatically, and you should tear off the paper manually.
LOAD PAPER	Specify the wait time between cut sheet is put into the paper guide and it is fed into the printer. Choose to wait specify time or press LF/FF key to feed paper.
SKEW	After selecting this function on, printer would adjust the skew paper automatically when loading cut sheet. (Only valid when tilt angle is within 30°.)
COVER OPEN	After selecting this function on, if the upper cover is open, printer would stop printing with an alarm.
EJECT	Specify paper eject direction when loading paper from front.
BAUD RATE	Specify the printer serial data transfer rate.
PARITY	Specify the parity bit for serial data transfer.
DATA BIT	Specify the serial data bits.
STOP BIT	Specify the serial data transfer stop bit.
PROTOCOL	Specify the protocol of printer serial data transfer as software control (XON/XOFF) or hardware control (DTR).
BREAK PIN	Select the broken pin. Printer would automatically replace it with other pin to print.
PIN SWITCH	After selecting this function on, printer would switch different pins to print table line automatically.

4.4.4 Online Aptitude Parameter Setting

This printer supports online aptitude parameter setting, you can set the printer parameter in PC through the Driver of this printer.

The concrete setting steps are shown as follows:

1. Ensure the printer and the computer are connecting with USB interface cable. Turn on both the printer and the computer, and the printer is in online mode.
2. Click "Start" → "Settings" → "Printers".
3. Right click "Jolimark BP1000K" in the "Printers", select "Properties".
4. Click "Device Property" in the property page.

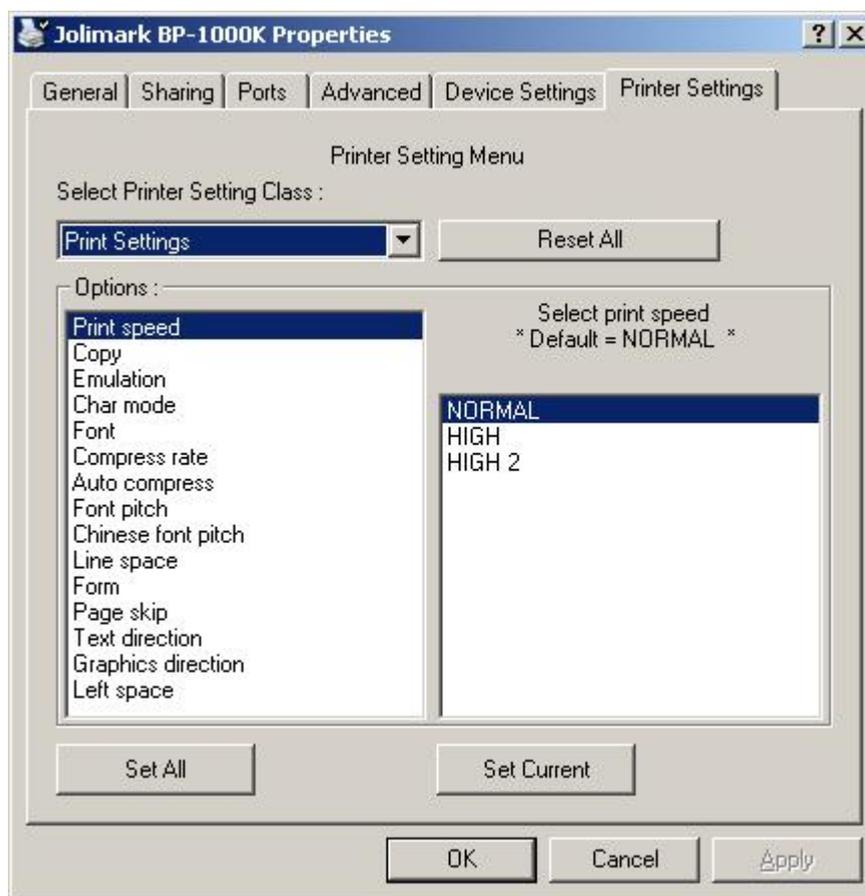

5. The setting way is corresponding with that of printer menu system. In the “Printer Settings” layout, select the first class menu in the combobox of “Select Printer Setting Class”, select the second menu in the “Configuration” and set the item in the current parameters list.
6. Click the button “Reset All” to reset all the parameters to be the driver’s default, but not change the printer’s settings.
7. When setting the parameters: you can click “Set Item” to save the current settings after setting each item, or you can also click “Set All Items” after setting all parameters. After clicking “Set All Item” or “Set Item”, the parameter’s instruction would be sent to the printer.
8. The printer’s parameter settings are changed at once after receiving the instruction and the printer does not need to restart.
9. After finishing settings, click “OK”, exit the “Properties” window.

4.4.5 Restoring Factory Printer Settings

You can restore to the factory printer settings without having to work through the Menu Setup System to reset the menus.

To restore to the factory settings:

1. Make sure that the printer is **Online**.
2. Press and hold down the **Online** and **Copy** keys on the control panel for 3 seconds.

The LEDs of the **Power** and **Online** on the control panel blink 3 times at the same time and the printer makes 2 beeps to confirm that the printer’s factory settings have been restored.

4.4.6 Head Pin Test

Press down **High speed** key then turn on the printer. The printer would print out a piece of “Head pin test” pattern. 24 pins would print out respective 24 lines which are marked with number 1 to 24. If certain pin cannot print its line, select broken-pin number in Break Pin mode in the menu.

4.5 TOF Adjustment

TOF is mean top of form position. When paper is loaded, the printer detects the end of the paper and determines the printing start position based on the detected paper end. That position is the top of the form. When the printer online, press ▲ **LF/FF** key for 3 seconds, and the printer LEDs of the power and online on the control panel blink by turns. The LCD display as right figure shows. That is mean the printer is in the mode of TOF adjustment.

Top of Form
adjusting...
(default)

Press “▲”, “▼” keys can change the setting of TOF (the maximum dimension of the changing of TOF is measure by the default setting under zero position):

Press “▲” key one time go forward 1/60 inch, maximum is 60/60 inch.

Press “▼” key one time go backward 1/60 inch, maximum is 30/60 inch.

After adjustment, press “▶II” key, the power light and the online light blink 3 times at the same time, and make out 2 beeps. Now the setting of TOF has been saved and exit.

4.6 Tear Off Position Adjustment

“Tear position adjustment” mainly use to adjust the distance between the perforations and the upper cover which make you more easily to tear the tractor paper. In the online mode, press ▲ **Load/Eject** and ▼ **LF/FF** keys at the same time for 3 seconds, then can enter the mode of tear off position adjustment. Here, the online light and the power light blink by turns, the LCD display as right picture shows.

Tear-off pos.
adjusting...
(default)

You can adjust the tear position by pressing “▲”and“▼” keys, (the maximum dimension of the changing of tear position is measure by the default setting under zero position):

Press “▲” key one time go forward 1/60 inch, maximum is 15/60 inch.

Press “▼” key one time go backward 1/60 inch, maximum is 15/60 inch.

After adjustment, press “▶II” key, the power light and the online light blink 3 times at the same time, and make out 2 beeps. Now the setting of tear position adjustment has been saved and exit.

4.7 The Self Test Functions

4.7.1 ASCII Self-Test

Hold down **Online** key then turn on the printer. The printer would print out a piece of ASCII pattern and then exit ASCII self test mode. Now you can start printing.

If you press **Online** key and **Load /Eject** key at the same time then turn on the printer, it will print out the ASCII pattern continuously. Press **Online** key to pause it. If you want to exit now, you can turn off the power then turn on again.

ASCII SELF TEST MODE

Version: BP-1000K v XXX 20XX/XX/XX

```
!"#$%&'()*+,-./0123456789:;<=>?@ABCDEFGHIJKLMNQRSTUUVWXYZ[\]^_`abc
!"#$%&'()*+,-./0123456789:;<=>?@ABCDEFGHIJKLMNQRSTUUVWXYZ[\]^_`abcd
!"#$%&'()*+,-./0123456789:;<=>?@ABCDEFGHIJKLMNQRSTUUVWXYZ[\]^_`abcde
```

Figure 4-3 ASCII self test mode

4.7.2 Chinese Self Test Mode

Press down **LF/FF** key then turn on the printer. The printer would print out Chinese pattern. Press **Online** key to pause it. If you want to exit now, you can turn off the power then turn on again.

printer is online.

When the printer enters dot Alignment Mode, online LED blinks.

In Dot Alignment mode, press the **Load/Eject** or **LF/FF** keys for adjusting dot alignment.

Load/Eject: Press to move the odd line to the right (original parameter values increase).

LF/FF: Press to move the odd line to the left (original parameter values decrease).

High Speed: Press to go to the next type of DPI character adjustment.

Online: Press to save the setting to the EEPROM.

To exit from this mode, turn the printer off.

(2) Graphic alignment Mode

To adjust graphic more accurate, press the **LF/FF** and **Online** keys about 3 seconds when the printer is online.

When the printer enters dot Alignment Mode, online LED blinks.

In Dot Alignment mode, press the **Load/Eject** or **LF/FF** keys for adjusting dot alignment.

Load/Eject: Press to move the odd line to the right (original parameter values increase).

LF/FF: Press to move the odd line to the left (original parameter values decrease).

High Speed: Press to go to the next type of DPI graphic adjustment.

Copy: Press to enter the graphic copy mode of dot alignment printing.

Online: Press to save the setting to the EEPROM.

To exit from this mode, turn the printer off.

Note: Alignment adjust mode will affect the printing quality, think over before adjust it and strict to the instructions while adjusting.

Chapter 5 Maintenance and Troubleshooting

5.1 Cleaning the Printer

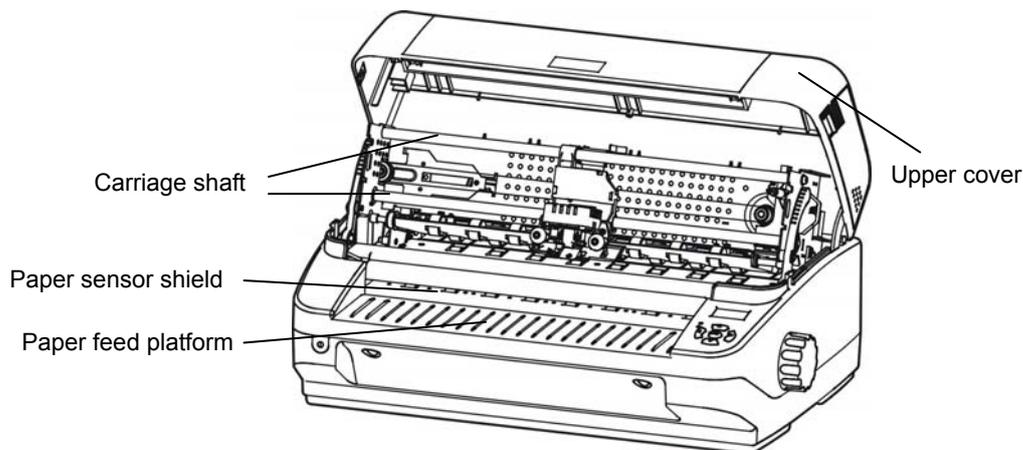


Figure 5-1 Clean the printer

■ Cleaning periodically and the cleaning tool

Periodical cleaning: every six months or every 300 working hours once

Cleaning tool: dry cloth (please use soft cloth to clean metal parts.)

■ Clean the paper feed platform

Wipe off the wasted paper and clean the dirt and dust.

■ Clean the carriage shaft

There is a layer of oil covered on the carriage shaft which guarantees the carriage runs smoothly. But the oil is easy to absorb dust, please clean the dust with soft cloth first, and then add proper lube (NYE180 lube of NYE Company is recommended), move print head back and forth to make lube scattered.

■ Clean the paper sensor parts

As the paper feed sensor use a correlation photoelectric sensor. You should clean the parts periodically.

Clean the surface of the paper sensor shield every three months.

When the paper sensor can not detect the paper which makes the paper can not be fed, you may clean the dust which on the shield of paper sensor.

Note: 1. Turn off printer and pull out the power cord before cleaning.

2. Being used under dust circumstance, the carriage shaft may stack much dust and affect the print quality.

3. If you have just finished using the printer let the print head cool for a few minutes before you touch it.

4. Don't use hard cloth or flammable solvent to clean the printer.

5.2 Problems and Solutions

When using the printer you may meet some problems as follow, please try the following solutions to settle them.

Paper jam

The flat and straight paper path is specially design for your large quantities of document no trouble printing.

When paper jam, please do as following steps:

1. Shut down the power and open the upper cover of the printer.
2. Pull the upper frame lever on both sides of the printer to lift up the upper frame.

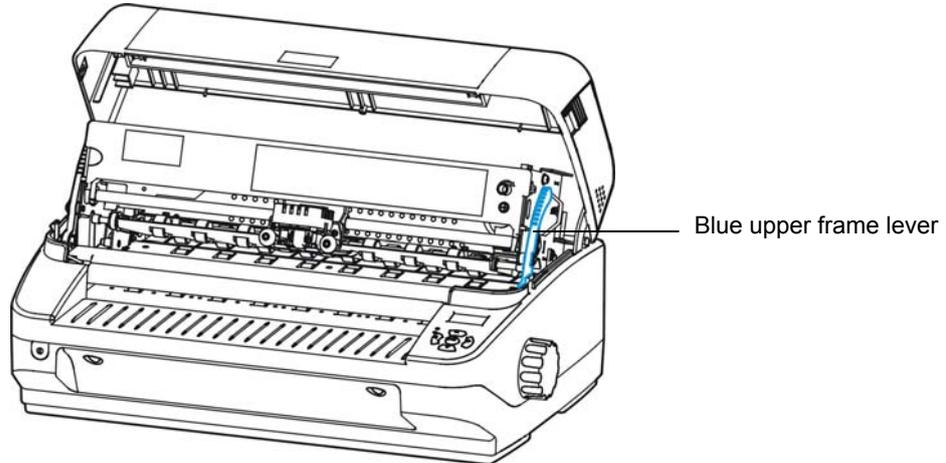


Figure 5-2 Lift up the upper frame

3. Pull out the jamming paper towards the front of the printer.

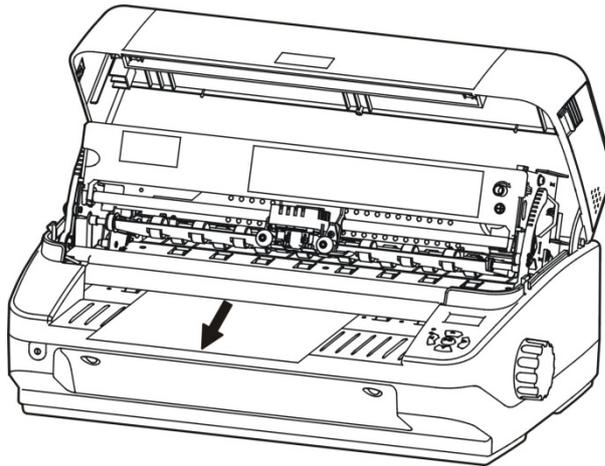


Figure 5-3 Pull out the jamming paper

4. If you can not touch the jamming paper or the paper had get into the printer can not take out, you can turn the knob at the right side of the printer, then take out the paper.

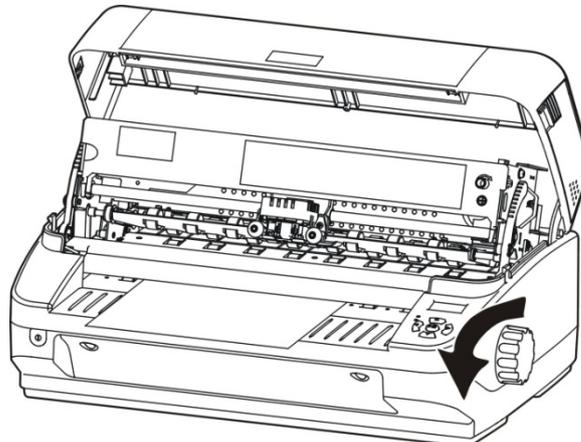


Figure 5-4 Turn the knob to take out the jamming paper

5. Press down the upper frame and pull the upper frame lever ahead till it locks in the correct position. Then pull backwards the upper frame lever and lock the upper frame.

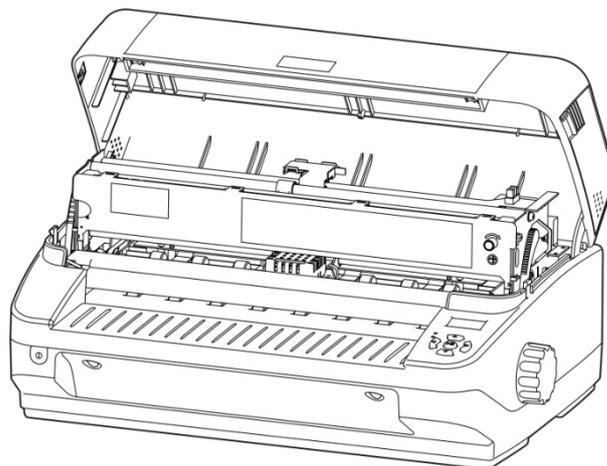


Figure 5-5 Press down the upper frame

6. Close the upper cover.

Turn on the printer normally, but can not online printing.

1. Please ensure the printer is connected with the computer with interface cable, and check the paper had been feed or not, and the online LED is on.
2. If still can not online printing, please change your interface cable.

The printout is faint

1. If the printing is faint please replace the ribbon.
2. Make sure that the ribbon cartridge is installed correctly, and the ribbon is fixed correctly between the print head and the ribbon guide slice.

The printing paper is dirty by the printing ink

The ribbon get away of the correct position, please reinstall ribbon core.

5.3 Error Indication on the Display of Control Panel

When the printer in trouble, it would in offline state, and alarm by the LED blinking also with the error indications on the display as follow:

Light	Display	Error	Reason	Solution
Power light blinks online light off	Paper out, please load paper	Paper out	Paper out	Please reload paper correctly
Power light and online light blink quickly simultaneous		Paper skew	The loaded paper is skew	
Power light and online light blink quickly alternately	Print head position (HP) error, please restart the printer	Print head home position is incorrect	Print head didn't move back to the home position	Shut down the power, then switch on again, if the problem still exist, please clean the carriage guide shaft and add some lube.

	Please eject the loaded paper, for fear affect the paper switch	paper switch mode error	Paper switch mode error	Eject the paper first, and then switch to the correct paper mode.
Power light and online light blink slowly alternately	Upper cover sensor error, please check if the upper cover had been close.	Upper cover sensor error	The upper cover not close or not close completely	Please check if the upper cover had been close correctly
Power light on, online light off, at the same time the print head move but noting printed.	The print head is in overheating protection, it will recover after a few minutes	Print head is overheating	Because the printer has working for a long time which made the print head is overheating.	The print head's temperature will drop by move to and fro, till it is cool, it will continue printing.

Chapter 6 Paper Specification

The printing paper should be up to the following demands:

- Use the paper that request in our manual
- It should be finer of the paper around edge, and the printing area should finer too, it can not has any perforation or cranny.
- The paper can not have any metal, hard plastic buckle and staple which would damage the printer.
- Only can use the passbook of thread binding
- For better printing result, you should print on the white or light colored paper, and you can reprint in the paper of low contrast.
- The transparence of the paper should less than 20 % , the transparent medium or high transparence paper may cause the error of paper load.
- When printing multilayer text, the glue on the top of the paper should cause the paper can not be conglutinated with the paper feeding platform.

- Note:**
1. To guarantee the quality of printing, please ensure the content should be in the printable area.
 2. If the content go beyond of the printable area, it would cause the pin breaking of the print head.

6.1 Cut Sheet Printable Area

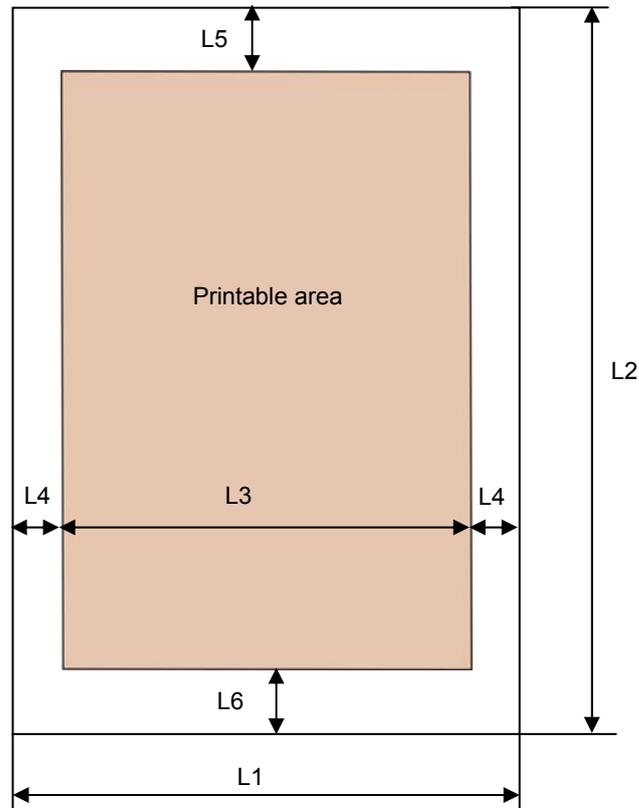


Figure 6-1 Cut sheet printable area

Dimension		Min.	Max.
L1	paper width	65 mm	330 mm

L2	paper length	66 mm	/
L3	printable area width	/	279.4 mm
L4	left, right margin	2 mm	/
L5	top margin	4 mm	/
L6	bottom margin	6 mm	/
weight		55 g/m ²	180 g/m ²

6.2 Tractor Paper Printable Area

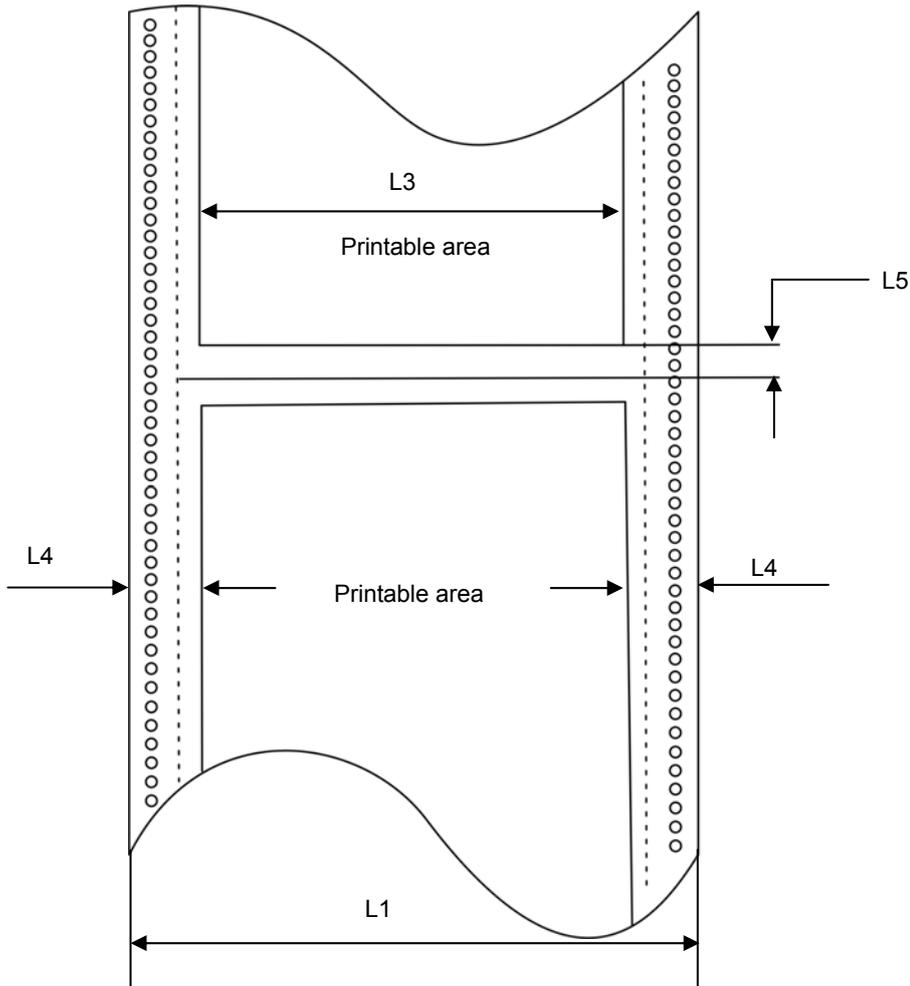


Figure 6-2 tractor paper printable area

Dimension		Min.	Max.
L1	paper width	65 mm	317.5 mm
L2	paper length	76.2 mm	/
L3	printable area width	/	279.4 mm
L4	left, right margin	13 mm	/
L5	top margin, bottom margin	4.2 mm	/
Paper weight		55 g/m ²	180 g/m ²
multi-part paper weight (single)		30 g/m ²	40 g/m ²
1+3 paper weight		/	160 g/m ²

1+6 paper weight

/

280 g/m²

6.3 Passbook Printable Area

6.3.1 Size Specifications of Horizontal Passbook

- The cover and the inner paper of the passbook should not have any crease, twist and breakage.
- The cover should be same thickness.
- Before printing, open the passbook, and turn down by the bind line which makes it more flat to load into the printer.
- The protuberance at the passbook's back where there is the bind line should not over 0.5mm, or it would cause the printing is not clear.

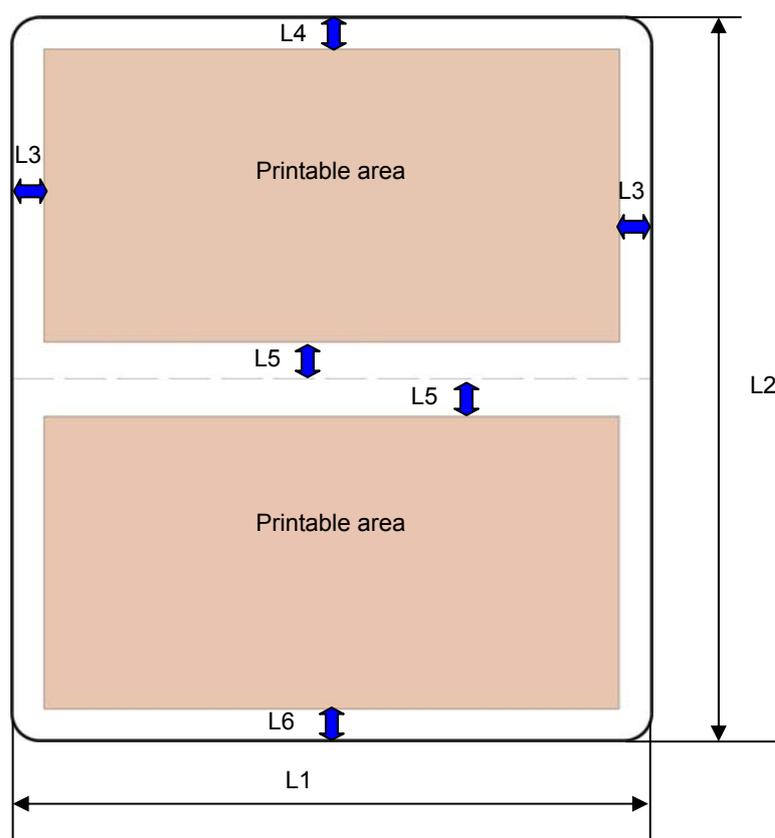


Figure 6-3 Horizontal passbook printable area

Dimension		Min.	Max.
L1	passbook width	65 mm	280 mm
L2	passbook length	105 mm	536 mm
L3	left, right margin	2 mm	/
L4	top margin Bottom margin	4 mm	/
L5	passbook centre joint margin width	5.1 mm	/
L6	bottom margin	6 mm	/
Paper weight		90 g/m ²	100 g/m ²
Paper thickness	multi-page passbook	/	3.0 mm
	passbook open thickness differences	/	1.52 mm
	single page passbook or ledger card	0.18 mm	0.28 mm

	passbook cover	0.18 mm	0.46 mm
--	----------------	---------	---------

6.3.2 Size Specifications of Vertical Certificate

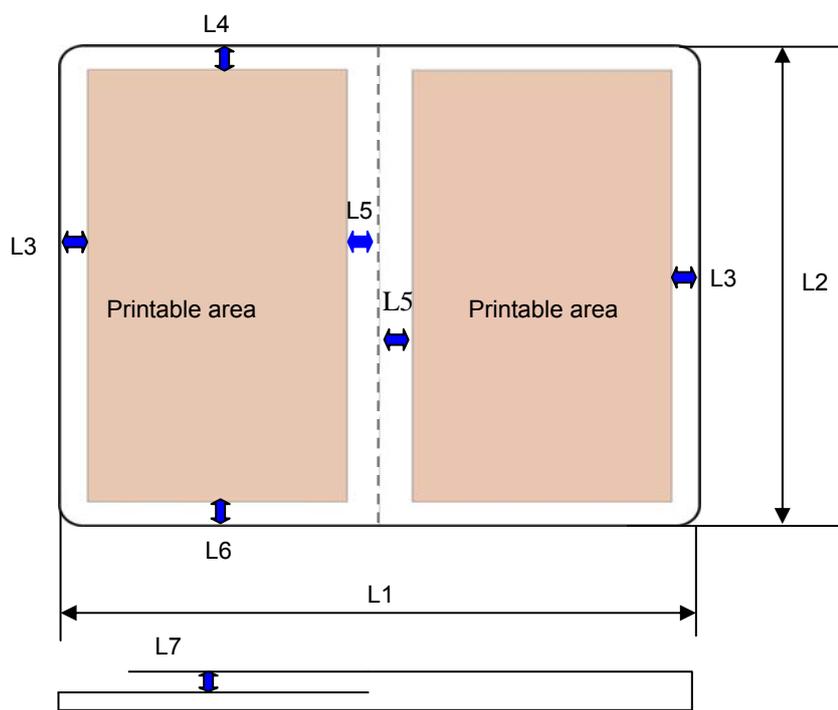


Figure 6-4 Vertical certificate printable area

Dimension		Min	Max
L1	certificate width	65 mm	280 mm
L2	certificate length	85 mm	536 mm
L3	left, right margin	2 mm	/
L4	top margin bottom margin	4 mm	/
L5	passbook centre joint margin width	7 mm	/
L6	bottom margin	6 mm	/
Paper weight		90 g/m ²	100 g/m ²
Paper thickness	multi-page passbook	/	3.0 mm
	passbook open thickness differences	/	1.2 mm
	single page passbook or ledger card	0.18 mm	0.28 mm
	passbook cover	0.18 mm	0.45 mm

Appendix A Technical Specification

A.1 Technical Specification

Item	Description					
Printing method	24-Pin Flatbed Dot Matrix Impact Printer					
Printing direction	Bi-directional logic seeking					
Printing width	110 column (10cpi)/279.4mm					
Printing speed	ASCII			Chinese		
	speed	10 CPI	12 CPI	speed	6.7 CPI	7.5 CPI
	Normal speed	100 CPS	120 CPS	Normal speed	66 CPS	75 CPS
	High speed	300 CPS	360 CPS	High speed	133 CPS	150 CPS
	Super high speed	360 CPS	432 CPS	Super high speed	200 CPS	225 CPS
	3 page/min (Base on GB25956-2010 Appendix.A, using GB/T 16685-2008 sample A, A4 page)					
Print head	Diameter of wire: 0.22 mm					
	Life: 500 million dots/wire					
Resolution	360 x 360 dpi (Max.)					
Character set	ASCII: 17 international character sets (U.S.A, FRANCE, GERMANY, U.K. DENMARK1, SWEDEN, ITALY, SPAIN1, JAPAN, NORWAY, DEMARK2, SPAIN2, L ATIN AM, KOREA, LEGAL, HOLLAND, TURKEY)					
	Chinese: GB 18030					
Code Page	U.S.A, MULTI, PORTUGAL, CANADA, NORWAY, EAST EURO, CYRILLIC, RUSSIAN, HUNGARY, KAMENICKY, TURKEY, ICELAND, BULGARIA, MAZOVIA, GRK 437, GRK 851, GRK8859-7, GRK 1253, ARAB NLS, ARAB EXT, WIN LAT1, WIN LAT2, ISL LTN1, ISO LTN2, TUR8859-9, ISO LTN9, KBL, LATIN 7					
Fonts	ASCII: Draft, Roman, Sans Serif, Courier, Prestige, Script, OCR-A, OCR-B, ORATOR					
	Chinese: GB18030 Song Ti					
Bar code	EAN-13, EAN-8, Interleaved 2 of 5, Matrix 2 of 5, Industrial 2 of 5, Code 39, Code 128 B, Code 128 C, NW-7					
Character pitch	ASCII: 10 CPI, 12 CPI, 15 CPI, proportional					
	Chinese: 6.7 CPI, 7.5 CPI					
Line space	1/6 inch, 1/8 inch, programmable in 1/360 inch increments					
Paper feeding speed (max.)	Cut sheet / Thick paper mode			330.2mm/s 13inch/s		
	Continuous paper mode (Tractor is optional)			254mm/s 10inch/s		
Emulation	EPSON ESC/PK2, OKI 5530SC, Olivetti PR2, IBM					
Interface	Parallel interface: Centronics (IEEE1284 NIBBLE Mode)					
	USB interface: USB 2.0 Full-Speed Serial interface: RS-232C (optional) Ethernet interface: 10/100Base-T (optional) Note: Only one of the serial interface or Ethernet interface is supplied when leaving factory. (According to the specific interface standards)					

Input Buffer	132 KB	
Ribbon	Model: JMR115	
	Life: 10 million characters (draft mode)	
Noise	<55 dB (A) (ISO7779 standard)	
Control panel	5 keys and 2 indicator lights and a LCD display	
Paper feed type	Cut sheet: Load/eject from the front / Load from front and eject from rear	
	Tractor paper (Tractor is optional) : Load front the rear , eject from the front	
Thickness adjust	Auto fit the thickness of the paper	
Paper specification	Cut sheet	Width: 65 ~ 330 mm
		Length: 66 ~ 536mm
		Thickness: 0.08 ~ 0.5 mm
		Weight: 55 ~ 180 g/m ²
	Tractor paper	Width: 65 ~ 317.5 mm
		Total Thickness: 0.06 ~ 0.5 mm
		Weight (Single paper): 55 ~ 180 g/m ² Multiple paper (Every page): 30 ~ 40 g/m ²
	Passbook and certificate	Width: 65 ~ 280 mm
		Length: 105 ~ 536 mm
		Total Thickness: Max 3.0 mm
		Weight (inner page): 90 ~ 100 g/m ²
	Max paper thickness	3.0 mm
Copy	Copy capability: Original + 6 copies Normal: original + 3 copies (0.065mm/page) — print once "1 + 3 copies": original + 5 copies (0.065mm/page) — print once "1 + 6 copies": original + 6copies (0.065mm/page) — print twice	
Rectify angle	±30°(Max.)	
Automatic function	Document Skew detection, Automatic document border detection, Automatic paper thickness detection	
Compress set	Support graph and character compress printing.	
Especial function	Pin Break Compensation, Pin Rotation Replacement, Automatic Emulation Match, Online Parameter Setting, Full slot position paper loading and printing Chinese LCD display	
Physical dimensions	470 (Width) × 340 (Depth) × 215 (Height) mm	
Weight	Approx. 12Kg	
Environmental conditions	Operating environment	Temperature: 5 ~ 40°C
		Humidity: 40%RH ~ 90%RH (No condensation)
	Storage environment	Temperature: -40 ~ 55°C
		Humidity: ≤93%RH (40°, No condensation)
Power requirements	Rated voltage range: 198 ~ 242 VAC	

	Rated frequency range: 50 ~ 60 Hz
Power	①Operation: 80 W; ②Maximum: 180 W; ③Standby: 6 W Caution: Only when the product is unconnected with outer power supply, it can achieve zero energy consumption state.
Reliability	MTBF≥20,000 hours (IEC 605.7standard)
Wireless disturbance	Grade B

A.2 Parallel Interface

Signal level

Input High level: 2 to 5V, Low level: 0 to 0.8V

Output High level: 2.4 to 5V, Low level: 0 to 0.4V

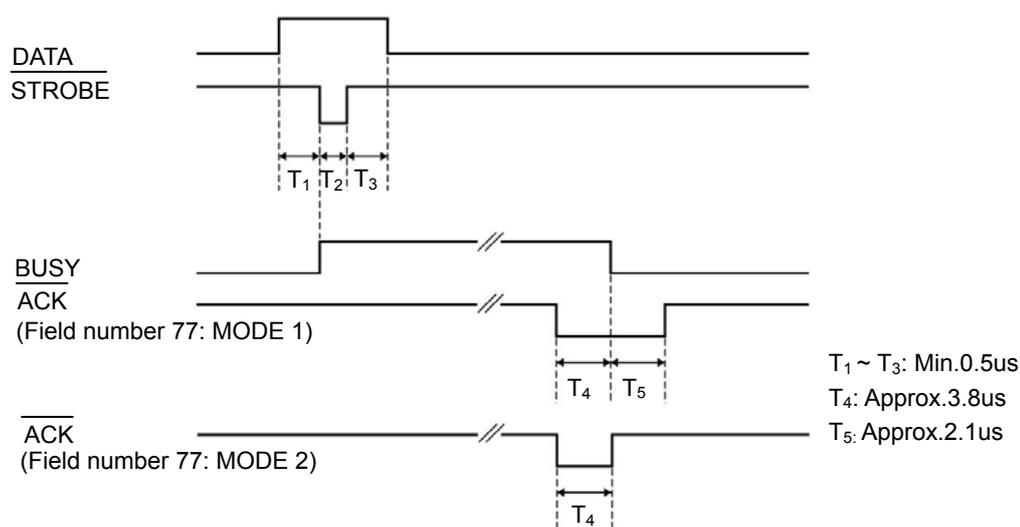


Figure A-1 Timing figure

Connector Pin Assignments

Signal Pin No.	Return Line Pin No.	Signal Name	Signal Direction
1	19	$\overline{\text{STROBE}}$	Printer ← Host
2 ~ 9	20 ~ 27	DATA	Printer ← Host
10	28	$\overline{\text{ACK}}$	Printer → Host
11	29	BUSY	Printer → Host
12	30	PE	Printer → Host
13	—	SELECT	Printer → Host
14	—	$\overline{\text{AUTO FEED}}$	Printer ← Host
15	—	NC	NC
16	—	SIGNAL GND	Printer ↔ Host
17	—	CHASSIS GND	Printer ↔ Host
18	—	+5V	Printer → Host

31	—	$\overline{\text{PRIME}}$	Printer ← Host
32	—	$\overline{\text{ERROR}}$	Printer → Host
33	—	SIGNAL GND	Printer ↔ Host
34	—	NC	Printer → Host
35	—	PULLED UP 5V	Printer → Host
36	—	$\overline{\text{SELECTIN}}$	Printer ← Host

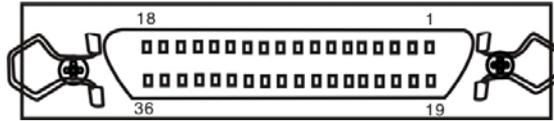


Figure A-2 Parallel interface connector pin number

A.3 USB Interface

USB interface is 2.0 (Full Speed), the interface connector A and B signal assignments are shown below:

NO.	Name	Color
1	VBUS	red
2	D-	white
3	D+	green
4	GND	black

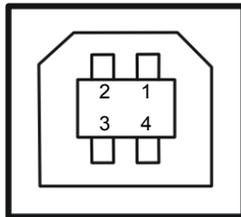


Figure A-3 USB-B type connector

A.4 Serial Interface

Serial specification

Data input/output mode: 7-bit or 8-bit serial interface

Data input code: ASCII, JIS 7-bit or 8-bit, International character code, CG, Dot matrix graphic code based on graphic symbol code (8-bit)

Data buffer: 132K bytes most

Signal level: RS-232C: $\pm 12V$

Data transit speed (baud rate) RS-232C: 4800bps, 9600bps, 19200bps

Data transmission protocol RS-232C: READY/BUSY (DTR) or X-ON/X-OFF

Synchronous system: Original bit: 1 bit Stop bit: 1~2 bit

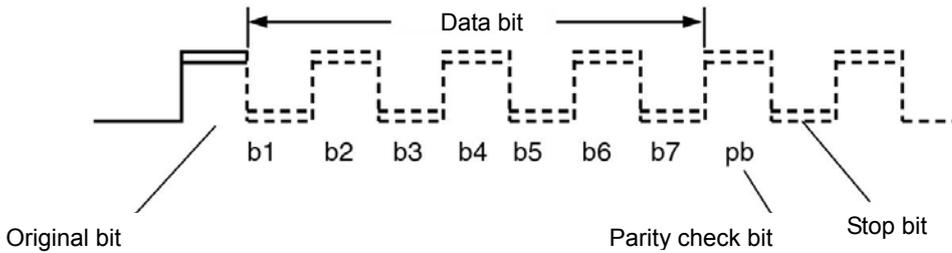


Figure A-4 Serial data format

Character length: 7~8 bits

Connector Pin Assignments

RS-232C default settings

PIN	ABBREVIATION	NAME	DIRECTION	RDY/BSY	X-ON/X-OFF
1	FG	Frame Ground	—	O	O
2	SD	Transmitted Data	OUT	X	O
3	RD	Received Data	IN	O	O
4	RTS	Request to Send	OUT	*	*
7	SG	Signal Ground	—	O	O
20	DTR	Data Terminal Ready	OUT	O	O

O: USE X: NOT USE *: HIGH LEVEL

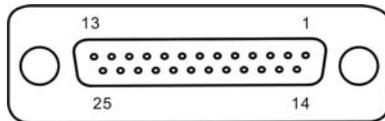


Figure A-5 Serial interface connector pin number

Signal description:

Prescription of signal level on RS-232C

1=Low (Mark): -25 ~ -3 V

0=High (Space): +3 ~ +25V

RDY/BSY protocol (RS-232C)

PIN 1 FG (Frame Ground--- connect to the printer rack)
 Connect to the circuit frame ground

PIN 3 RD (Received Data)
 Receive serial data from the computer through this pin. This pin is low level when it receives no data.

PIN 7 SG (Signal Ground)
 Connect to the signal ground

PIN 20 DTR (Data Terminal Ready)
 This pin is high level when the printer is ready to receive data. It is low level when not ready to receive data.

X-ON/X-OFF Protocol (RS-232C)

PIN 1	FG (Frame Ground---connect to the printer rack) Connect to the circuit frame ground.
PIN 2	SD (Transmitted Data) Send serial data to the printer through this pin. This pin is low level when it receives no data.
PIN 3	RD (Received Data) Receive serial data from the printer through this pin. This pin is low level when it receives no data.
PIN 4	RTS (Request to Send) Send Request to send signal from the printer. This pin is high level when the printer is turned on.
PIN 7	SG (Signal Ground) Connect to the signal ground.
PIN 20	DTR (Data Terminal Ready) Output the signal from the printer. This pin is high level when the printer is turned on.

A.5 Ethernet Interface

Ethernet interface of 10/100 Base-T can be connected to 10/100M.

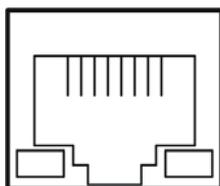


Figure A-6 Ethernet interface

A.6 Cautions of Printing

- The paper which inserted should not be collapsed, tore or carry any staple, clip or pin and so on. (As shown in A-7) Or else, it will damage the printer seriously.
- Do not use the print paper which edges fall into disrepair.
- Do not use the single sheet tractor paper can single sheet fanfold paper in the cut sheet mode, because the holds on the both sides of the tractor paper or the folds on the fanfold paper edges will lead to paper jamming. (As shown in A-8)



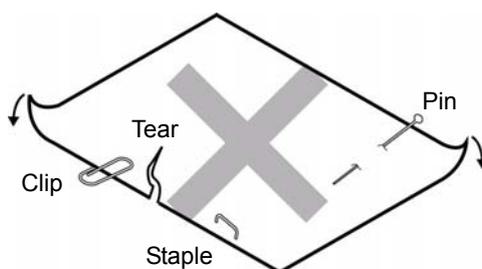


Figure A-7

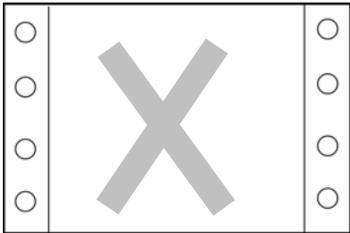

Single sheet tractor paper

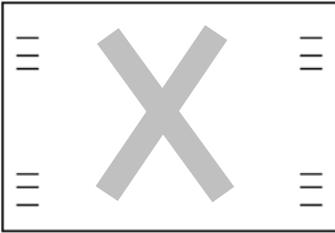

Single sheet copy paper

Figure A-8

Jolimark